

# 1964 RAMBLER CLASSIC & AMBASSADOR

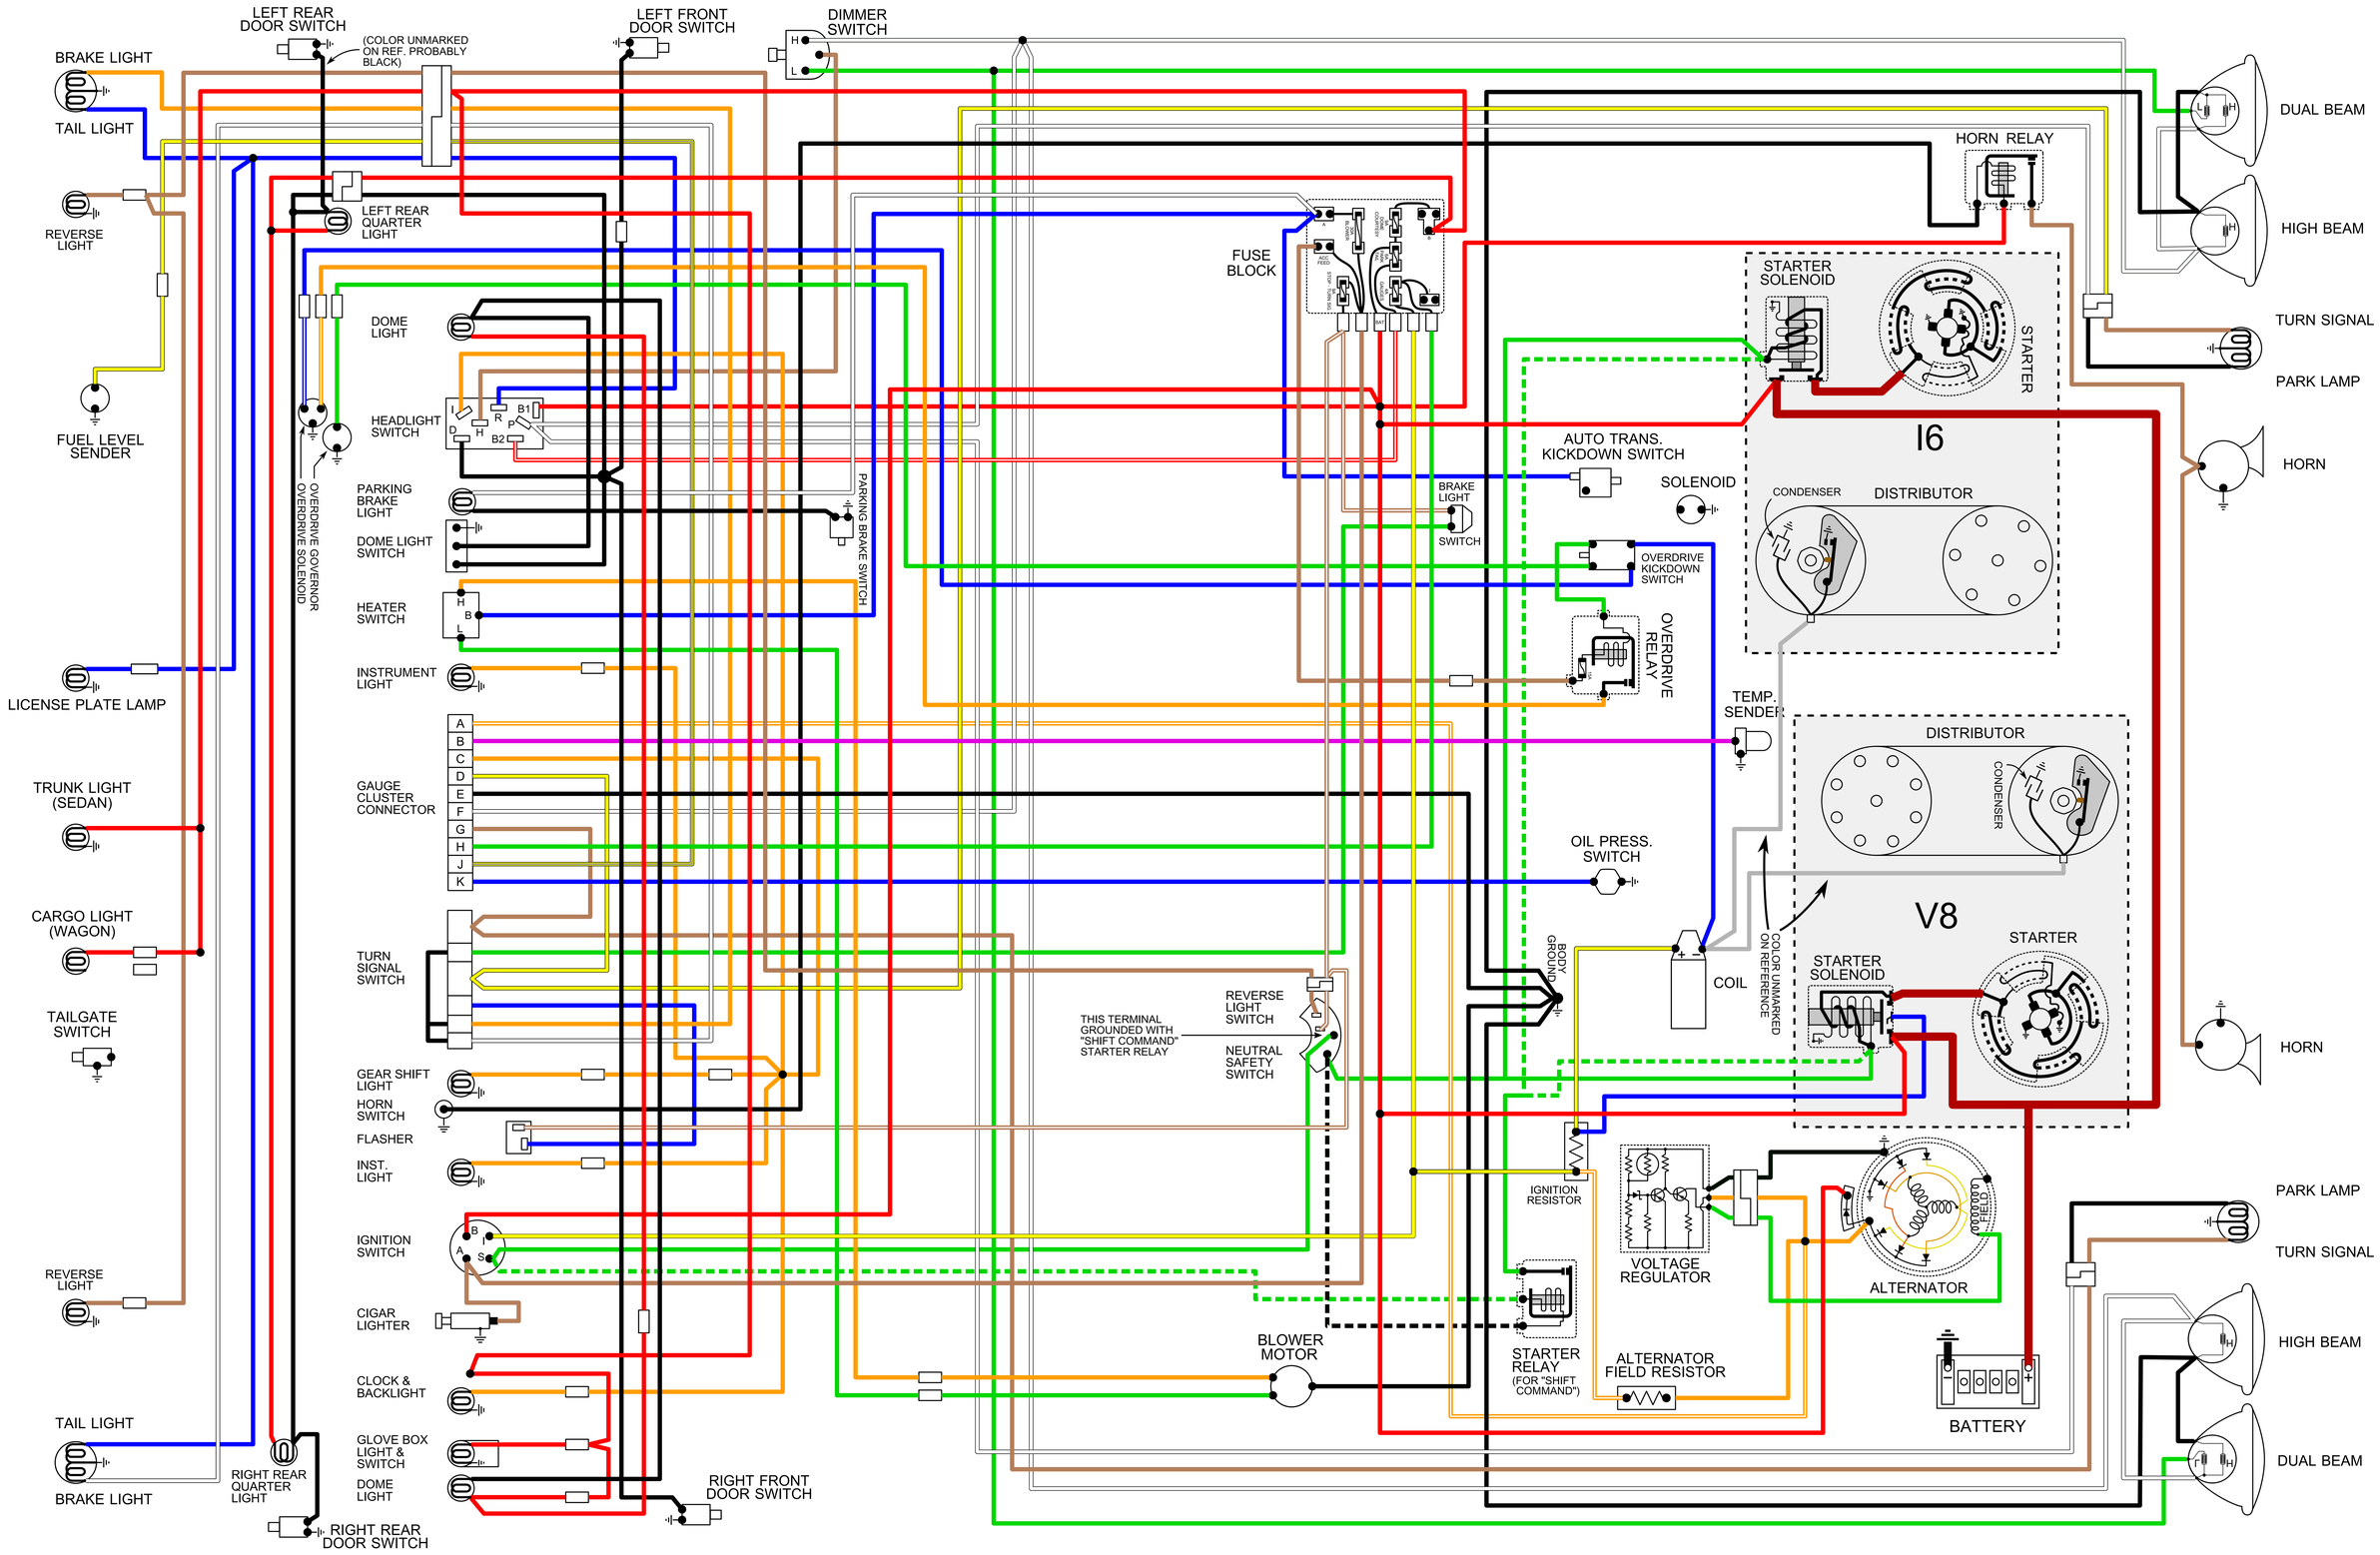


CINCO

# 1964 RAMBLER CLASSIC & AMBASSADOR


## MAIN POWER

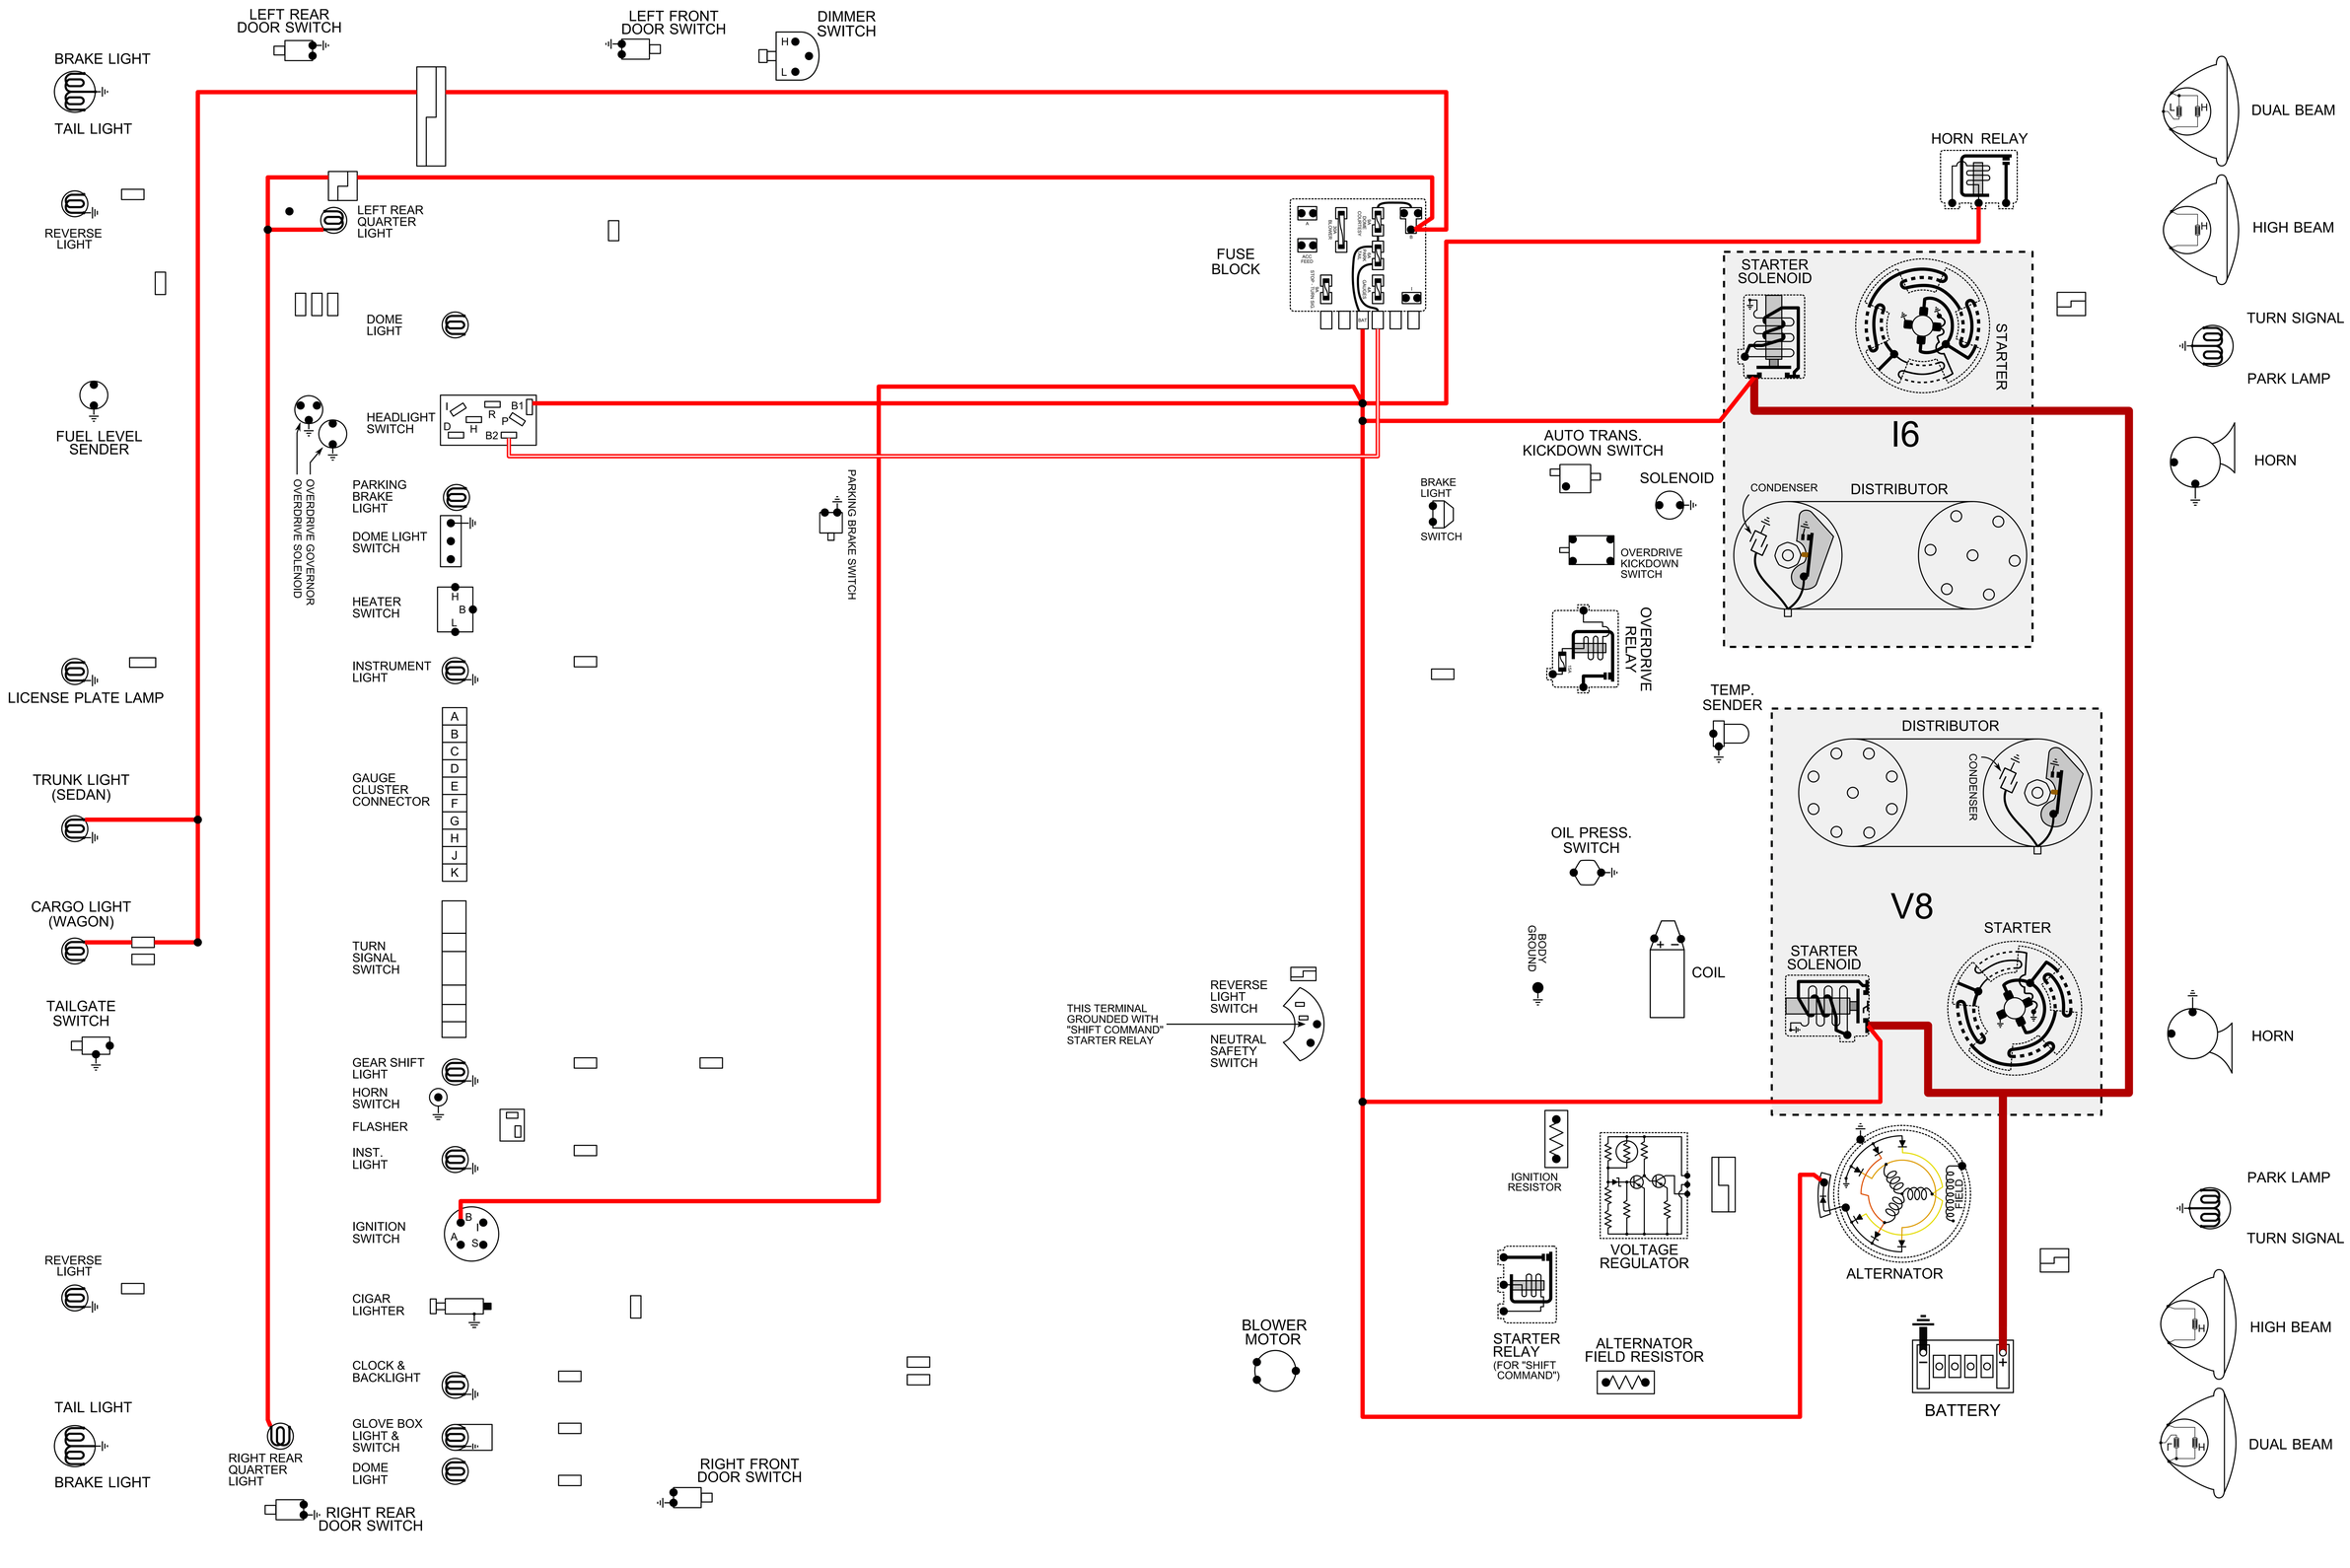


CINCO


# 1964 RAMBLER CLASSIC & AMBASSADOR

## ACCESSORY POWER

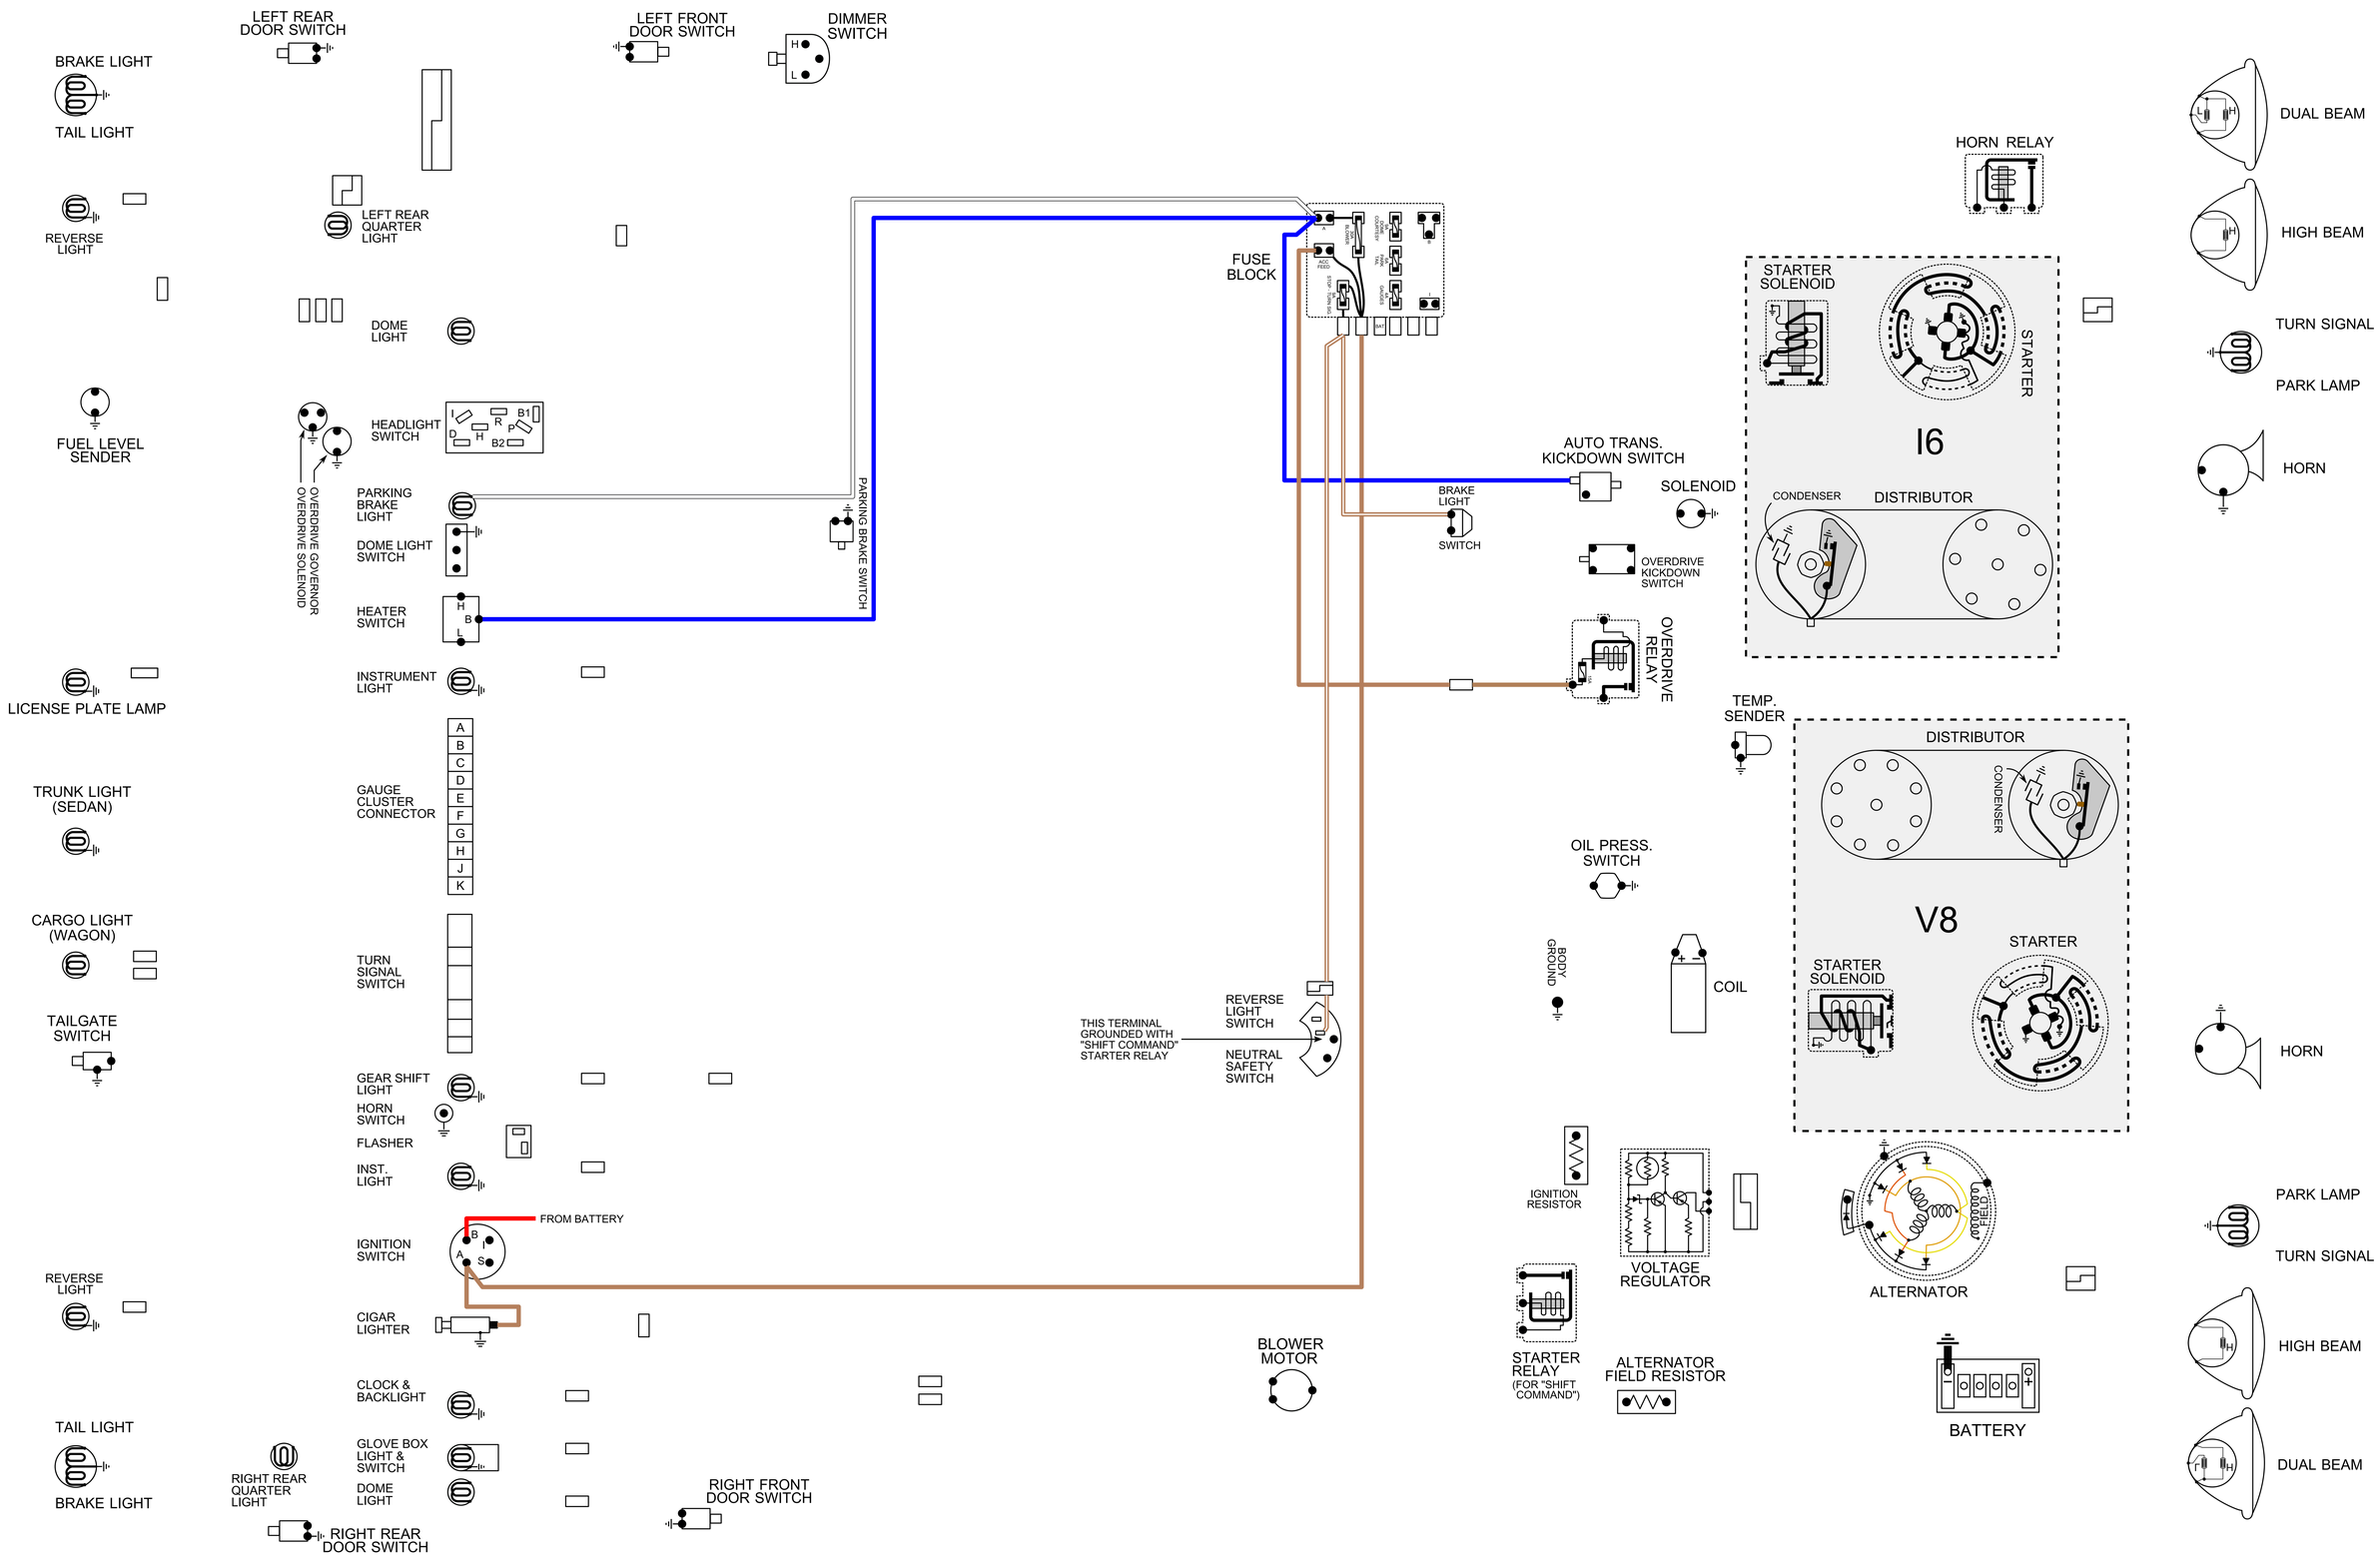

# 1964 RAMBLER CLASSIC & AMBASSADOR


## STARTING SYSTEM V8

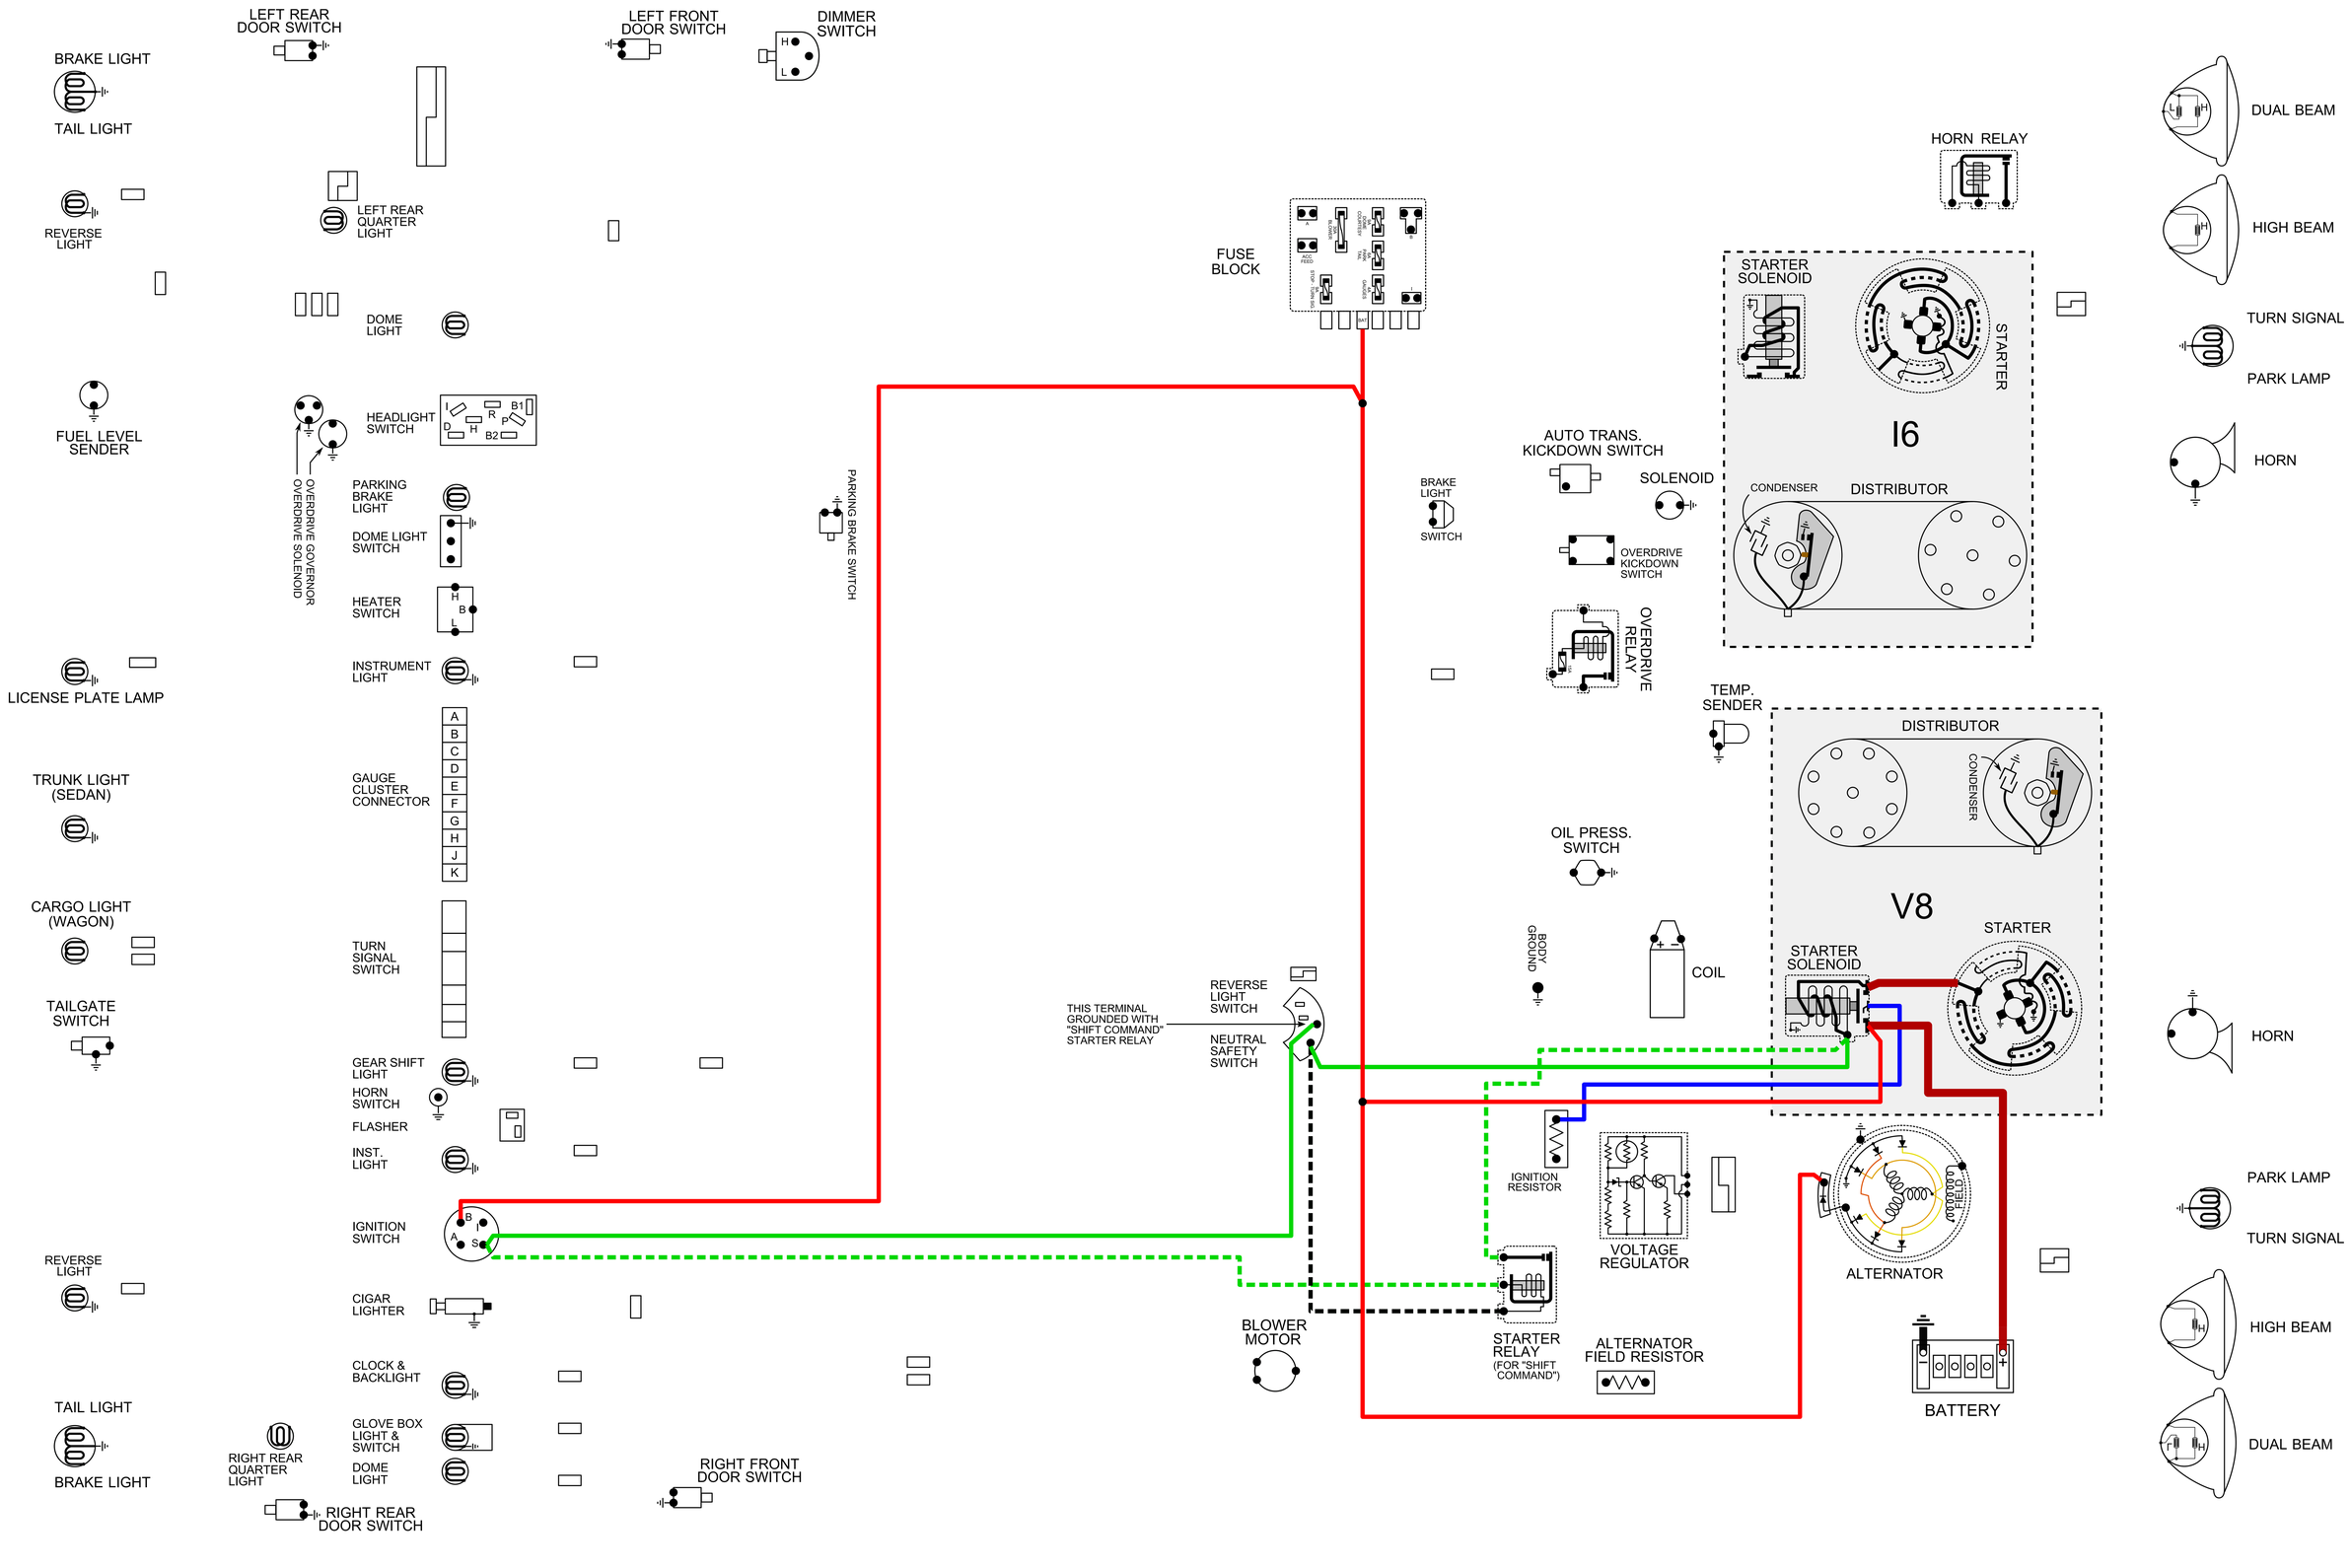


CINCO

# 1964 RAMBLER CLASSIC & AMBASSADOR


## STARTING SYSTEM I6

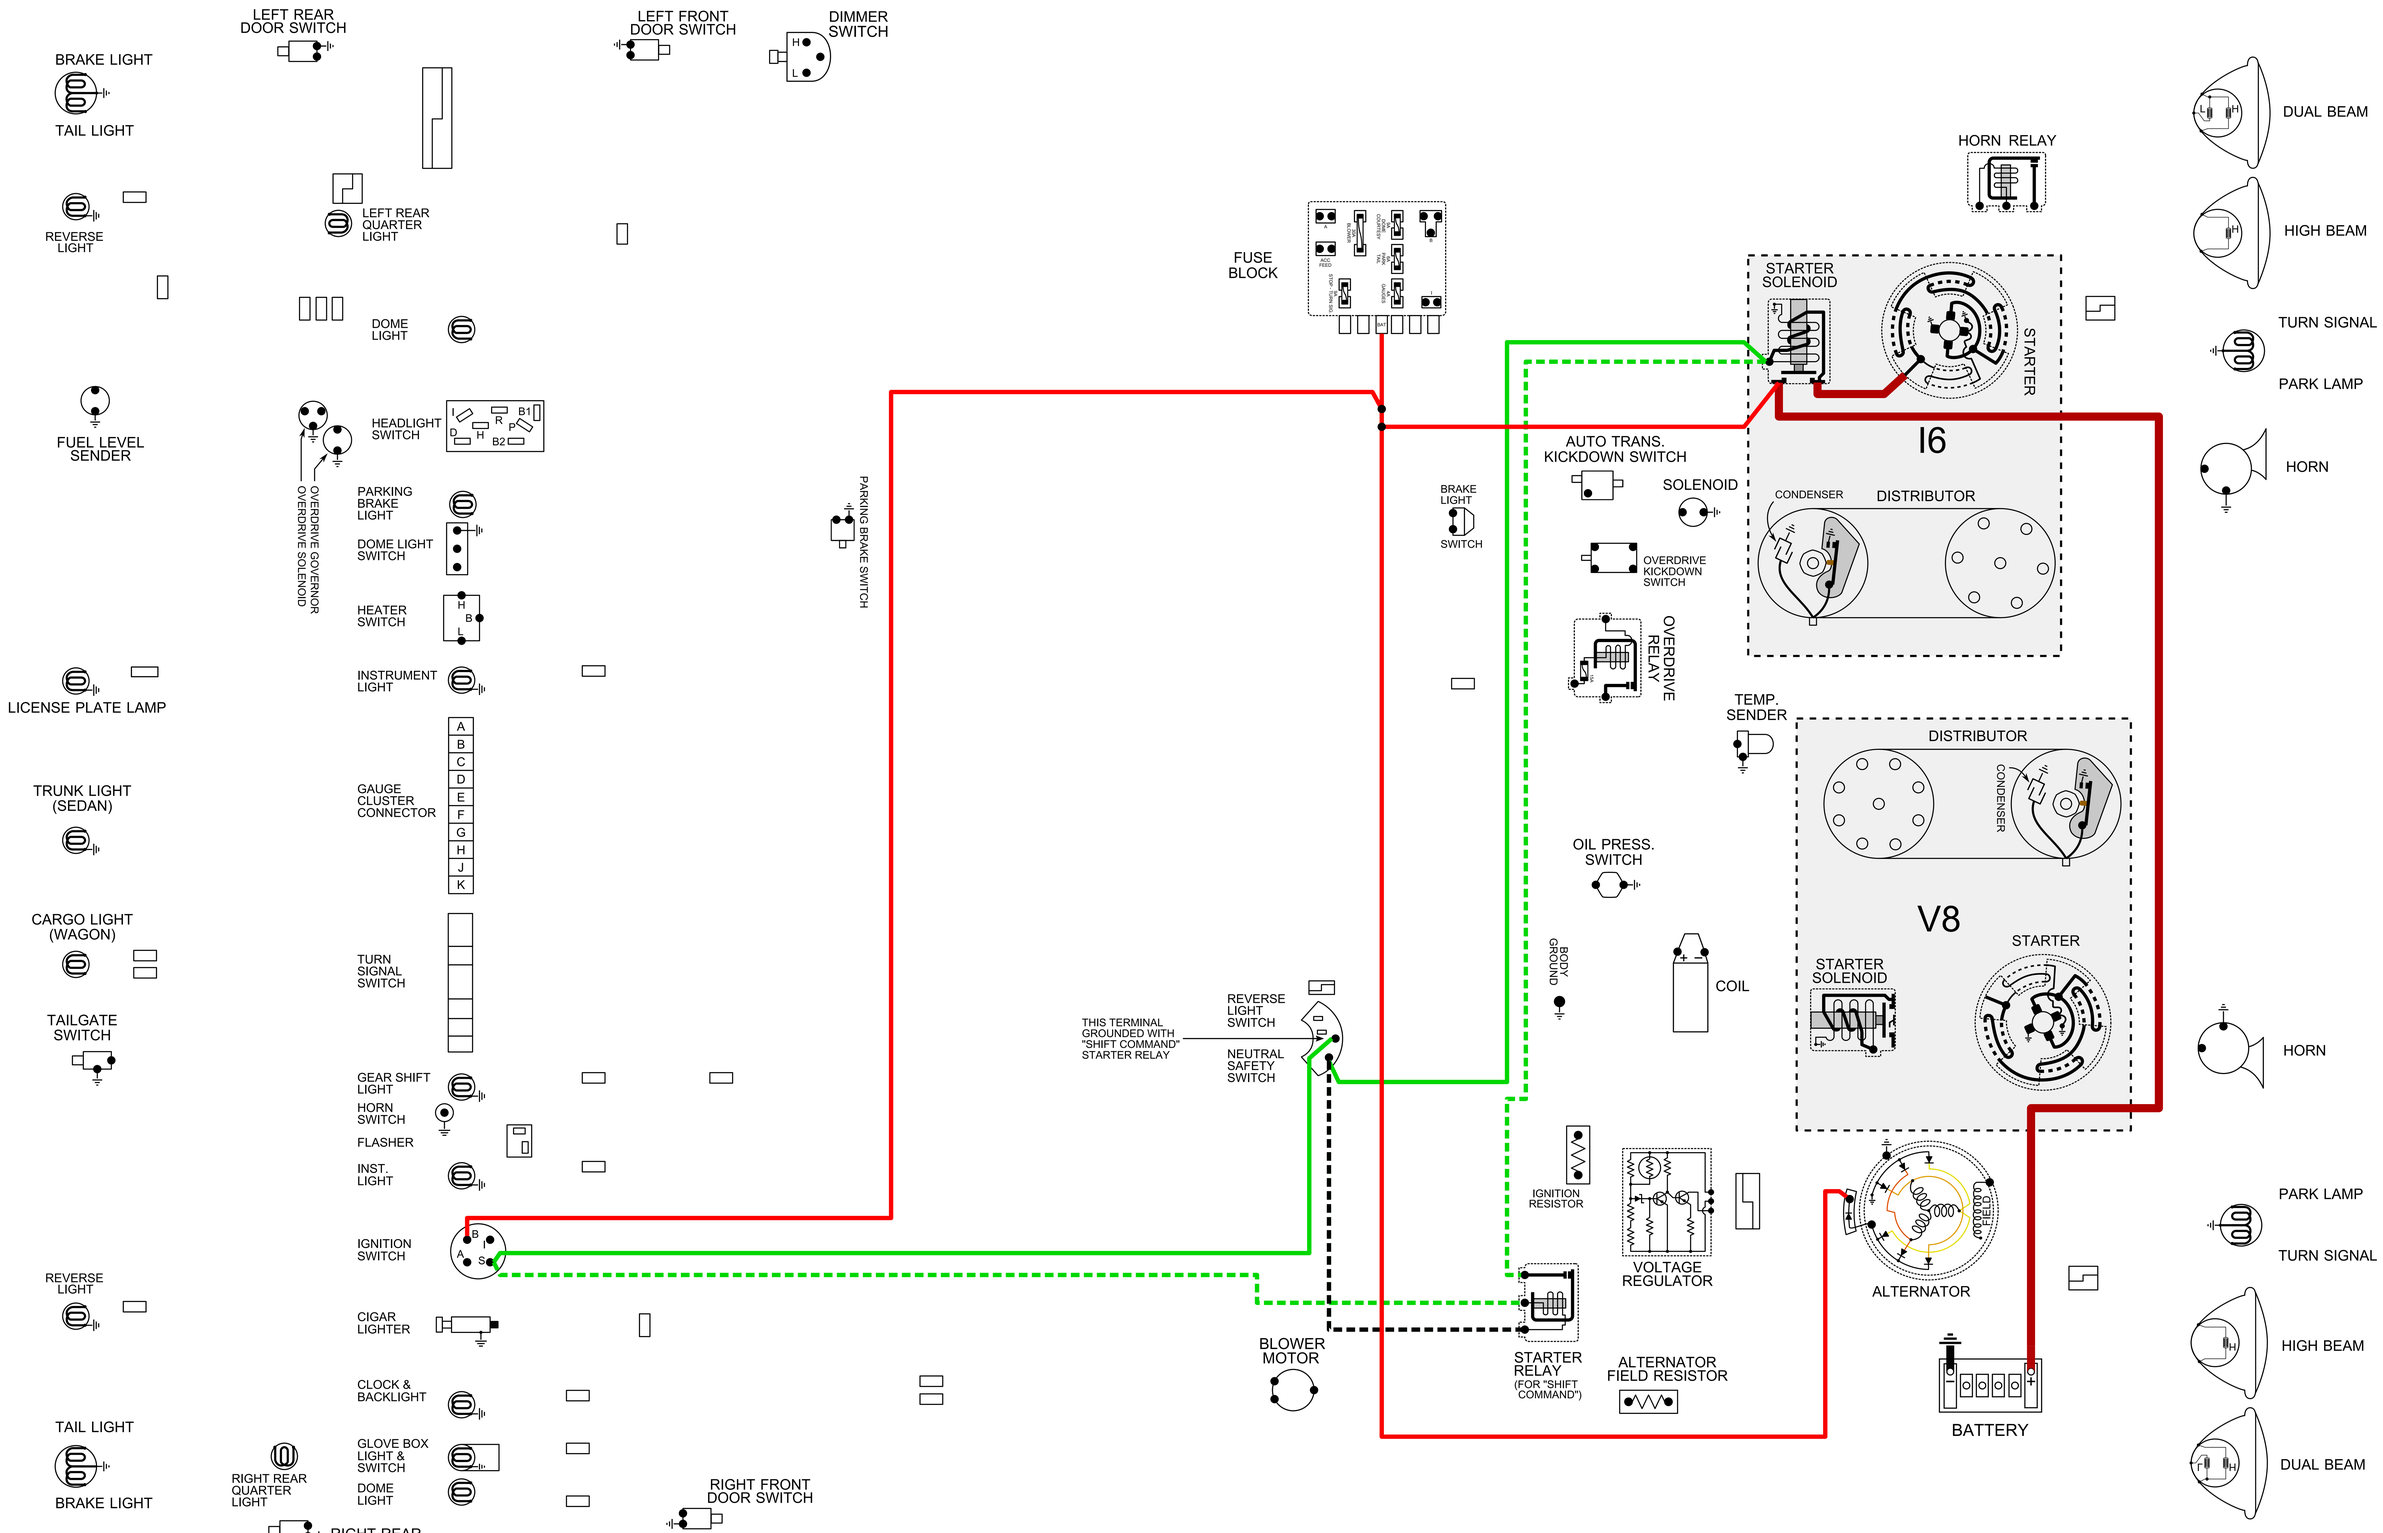


CINCO

# 1964 RAMBLER CLASSIC & AMBASSADOR


## IGNITION SYSTEM

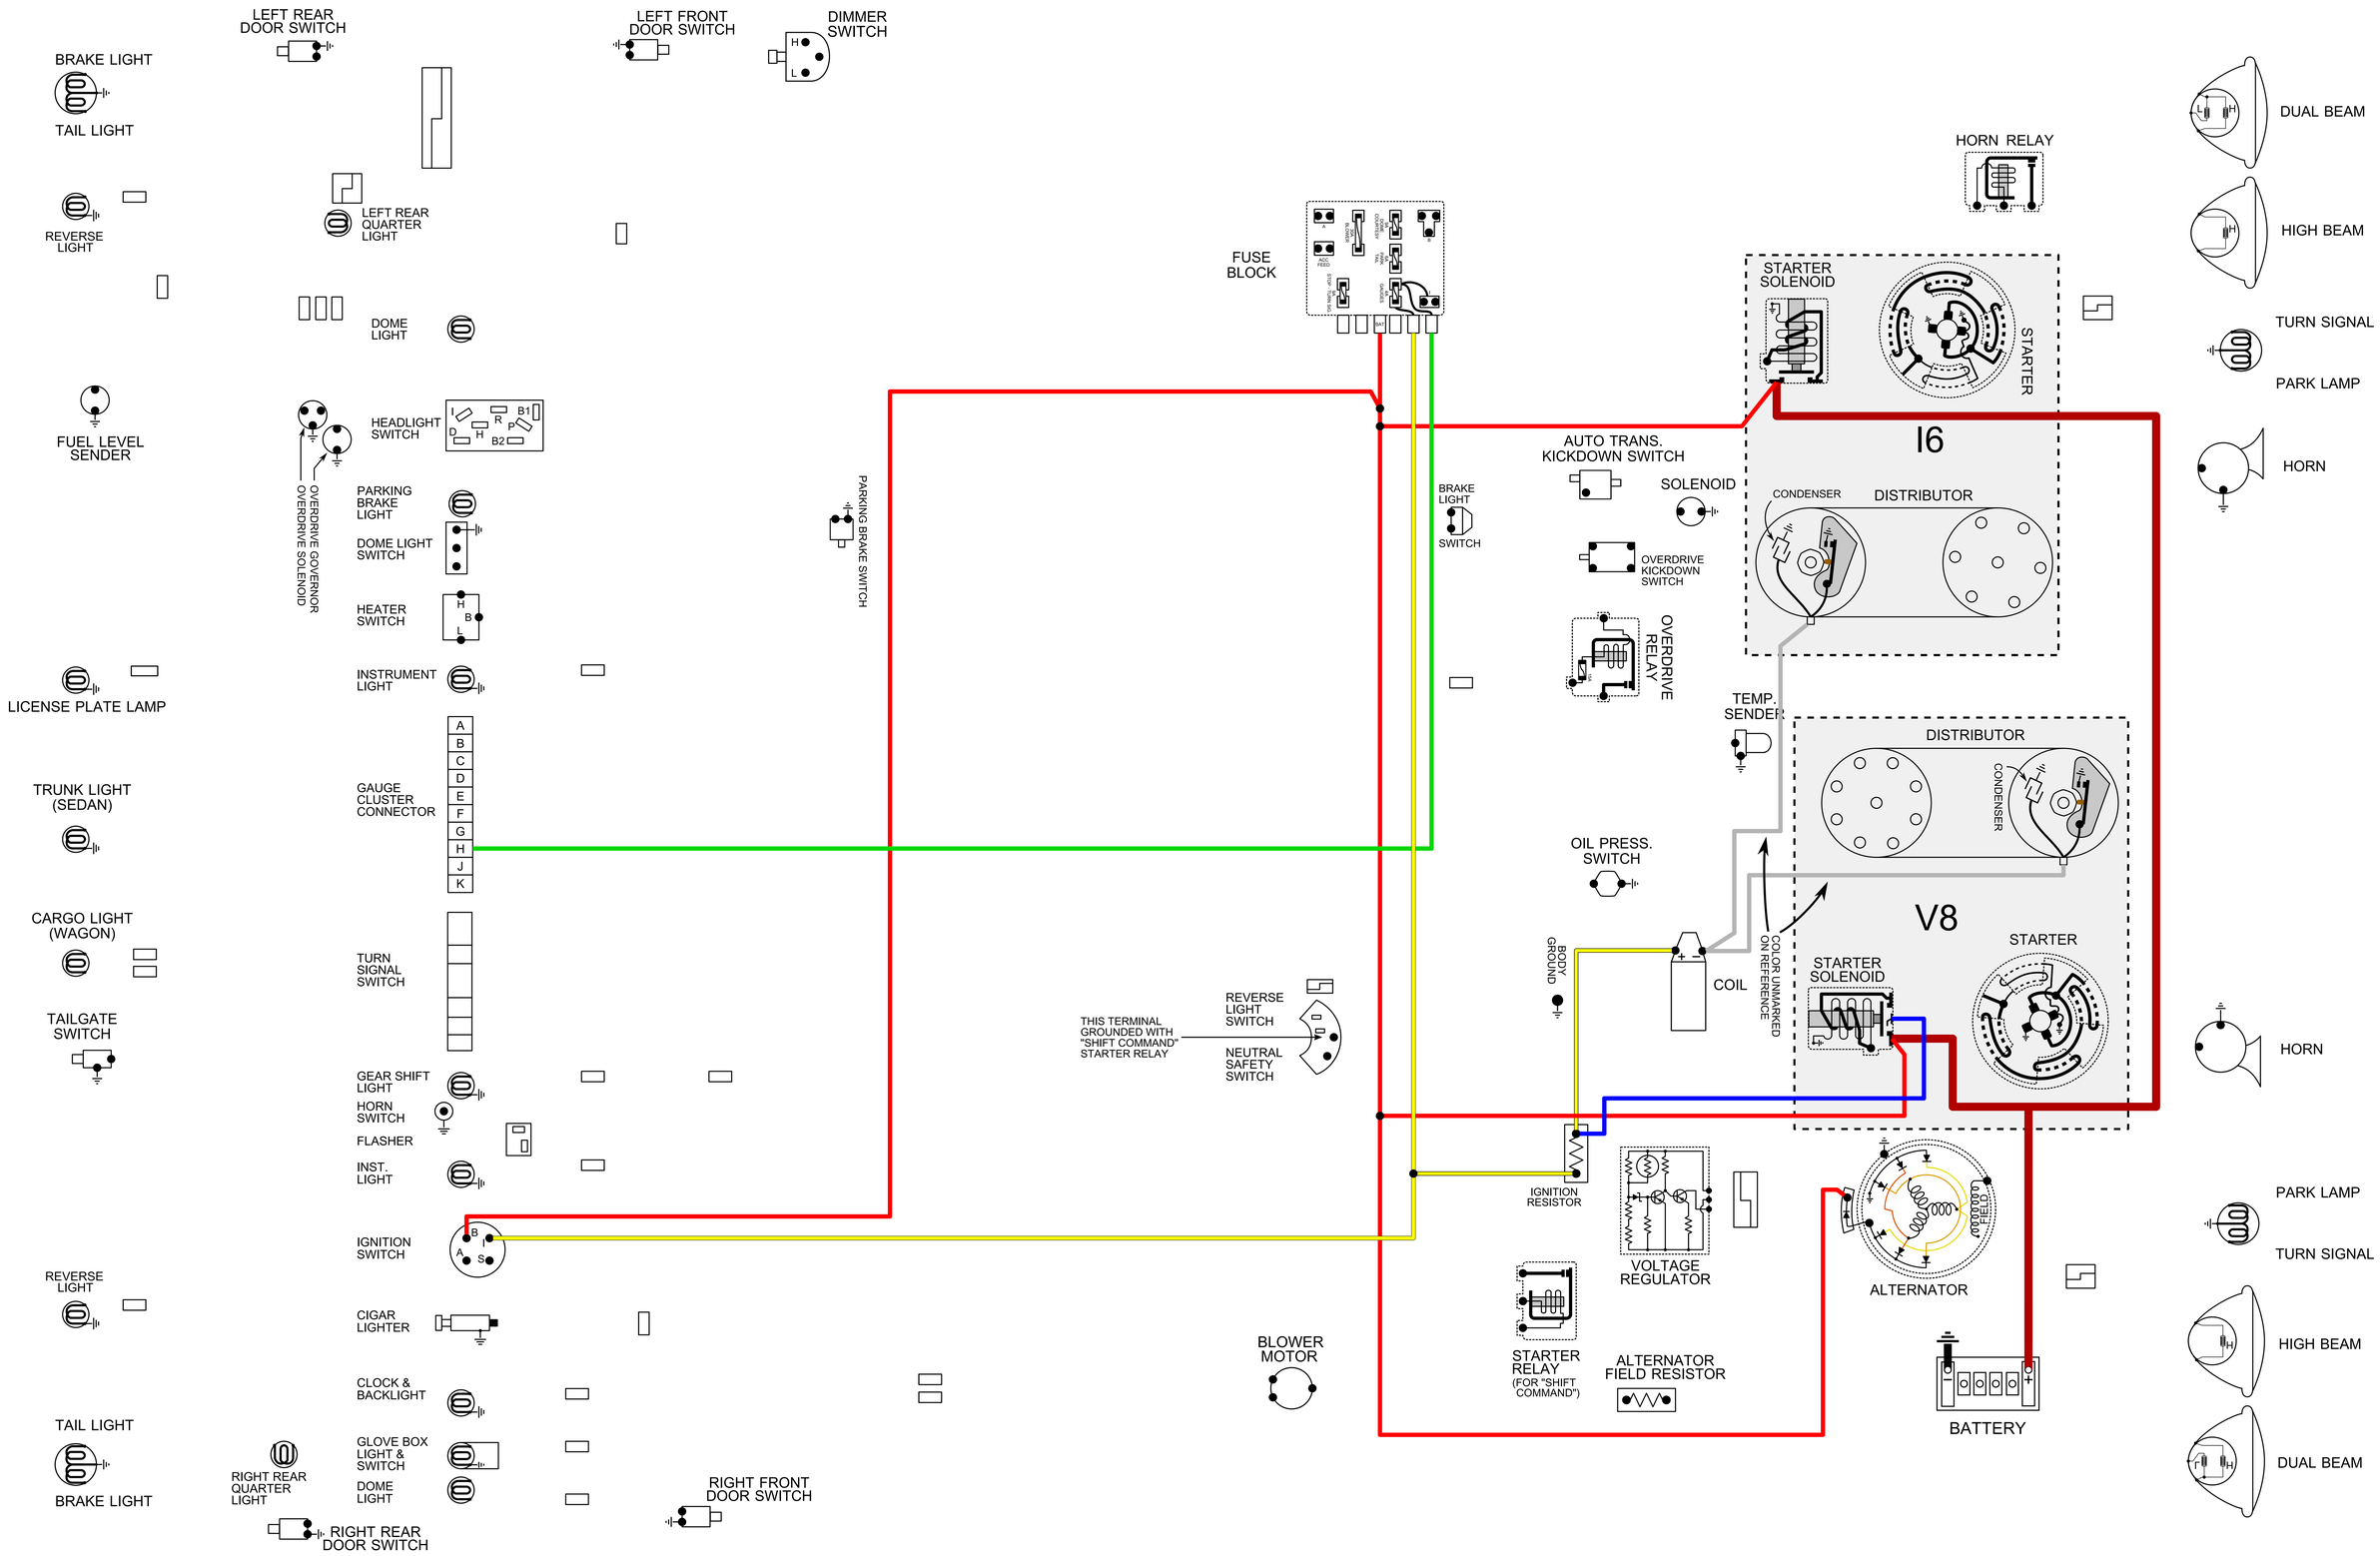


CINCO

# 1964 RAMBLER CLASSIC & AMBASSADOR


## CHARGING SYSTEM

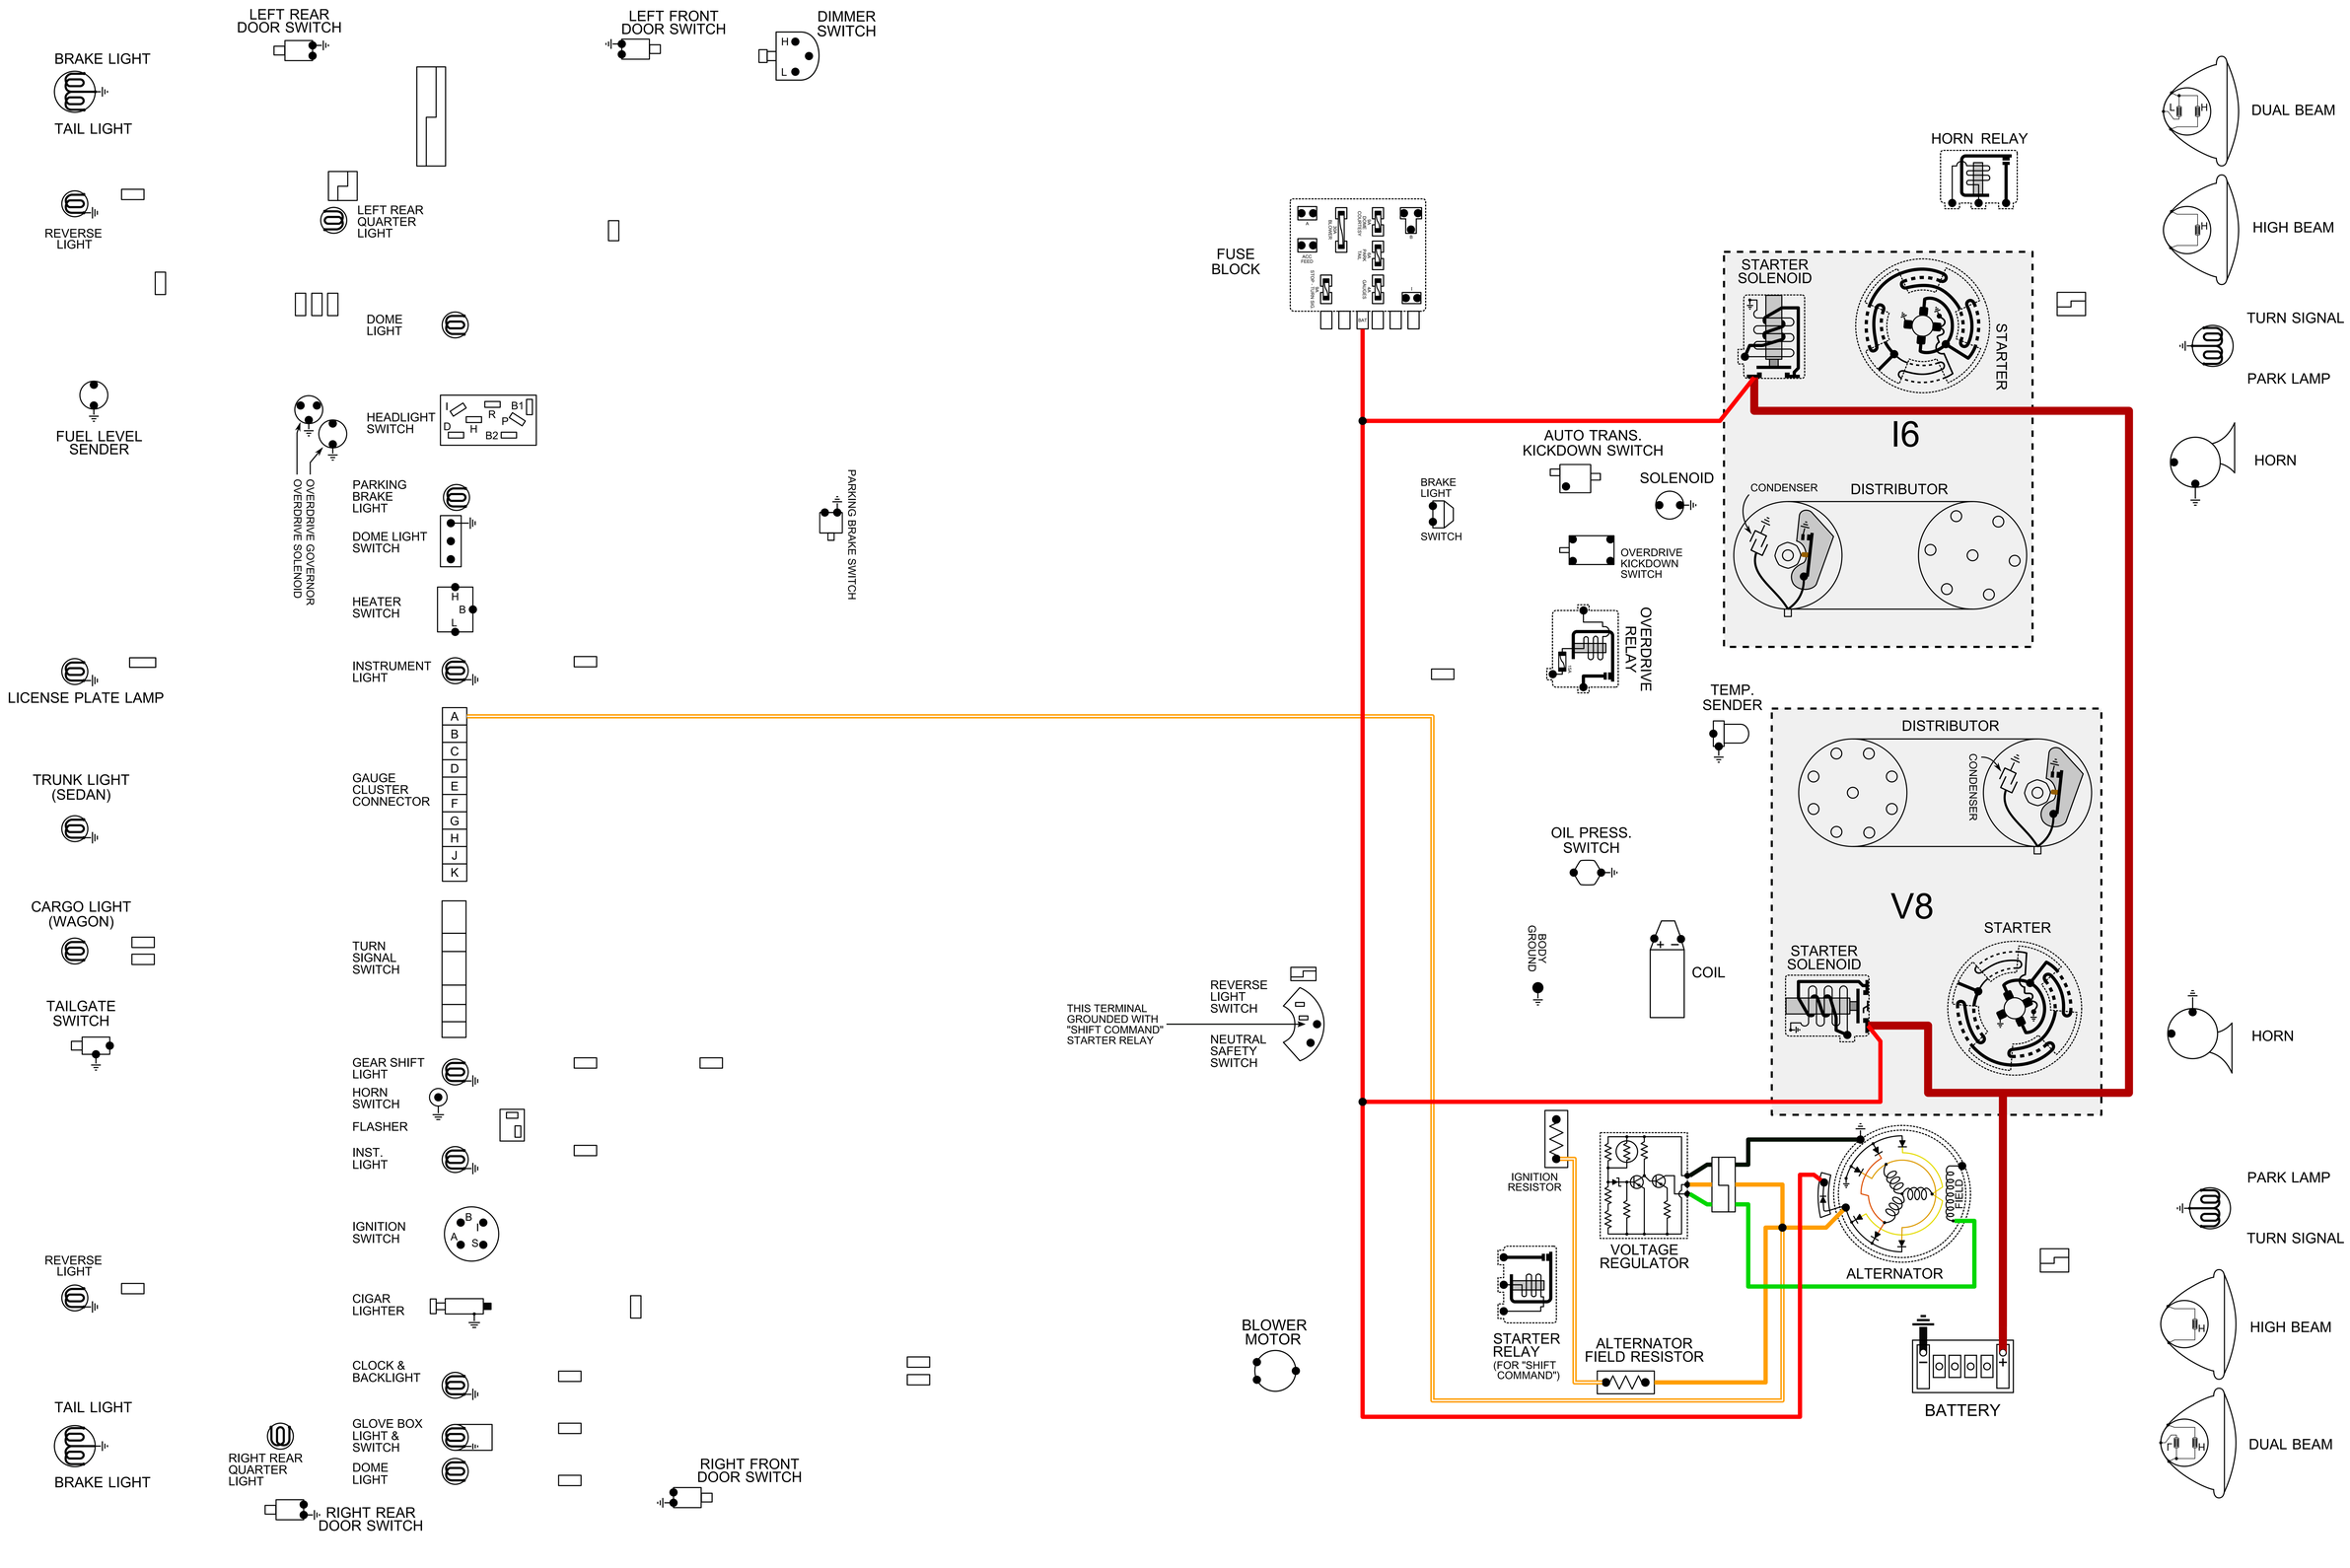


CINCO


# 1964 RAMBLER CLASSIC & AMBASSADOR

## HEADLIGHTS

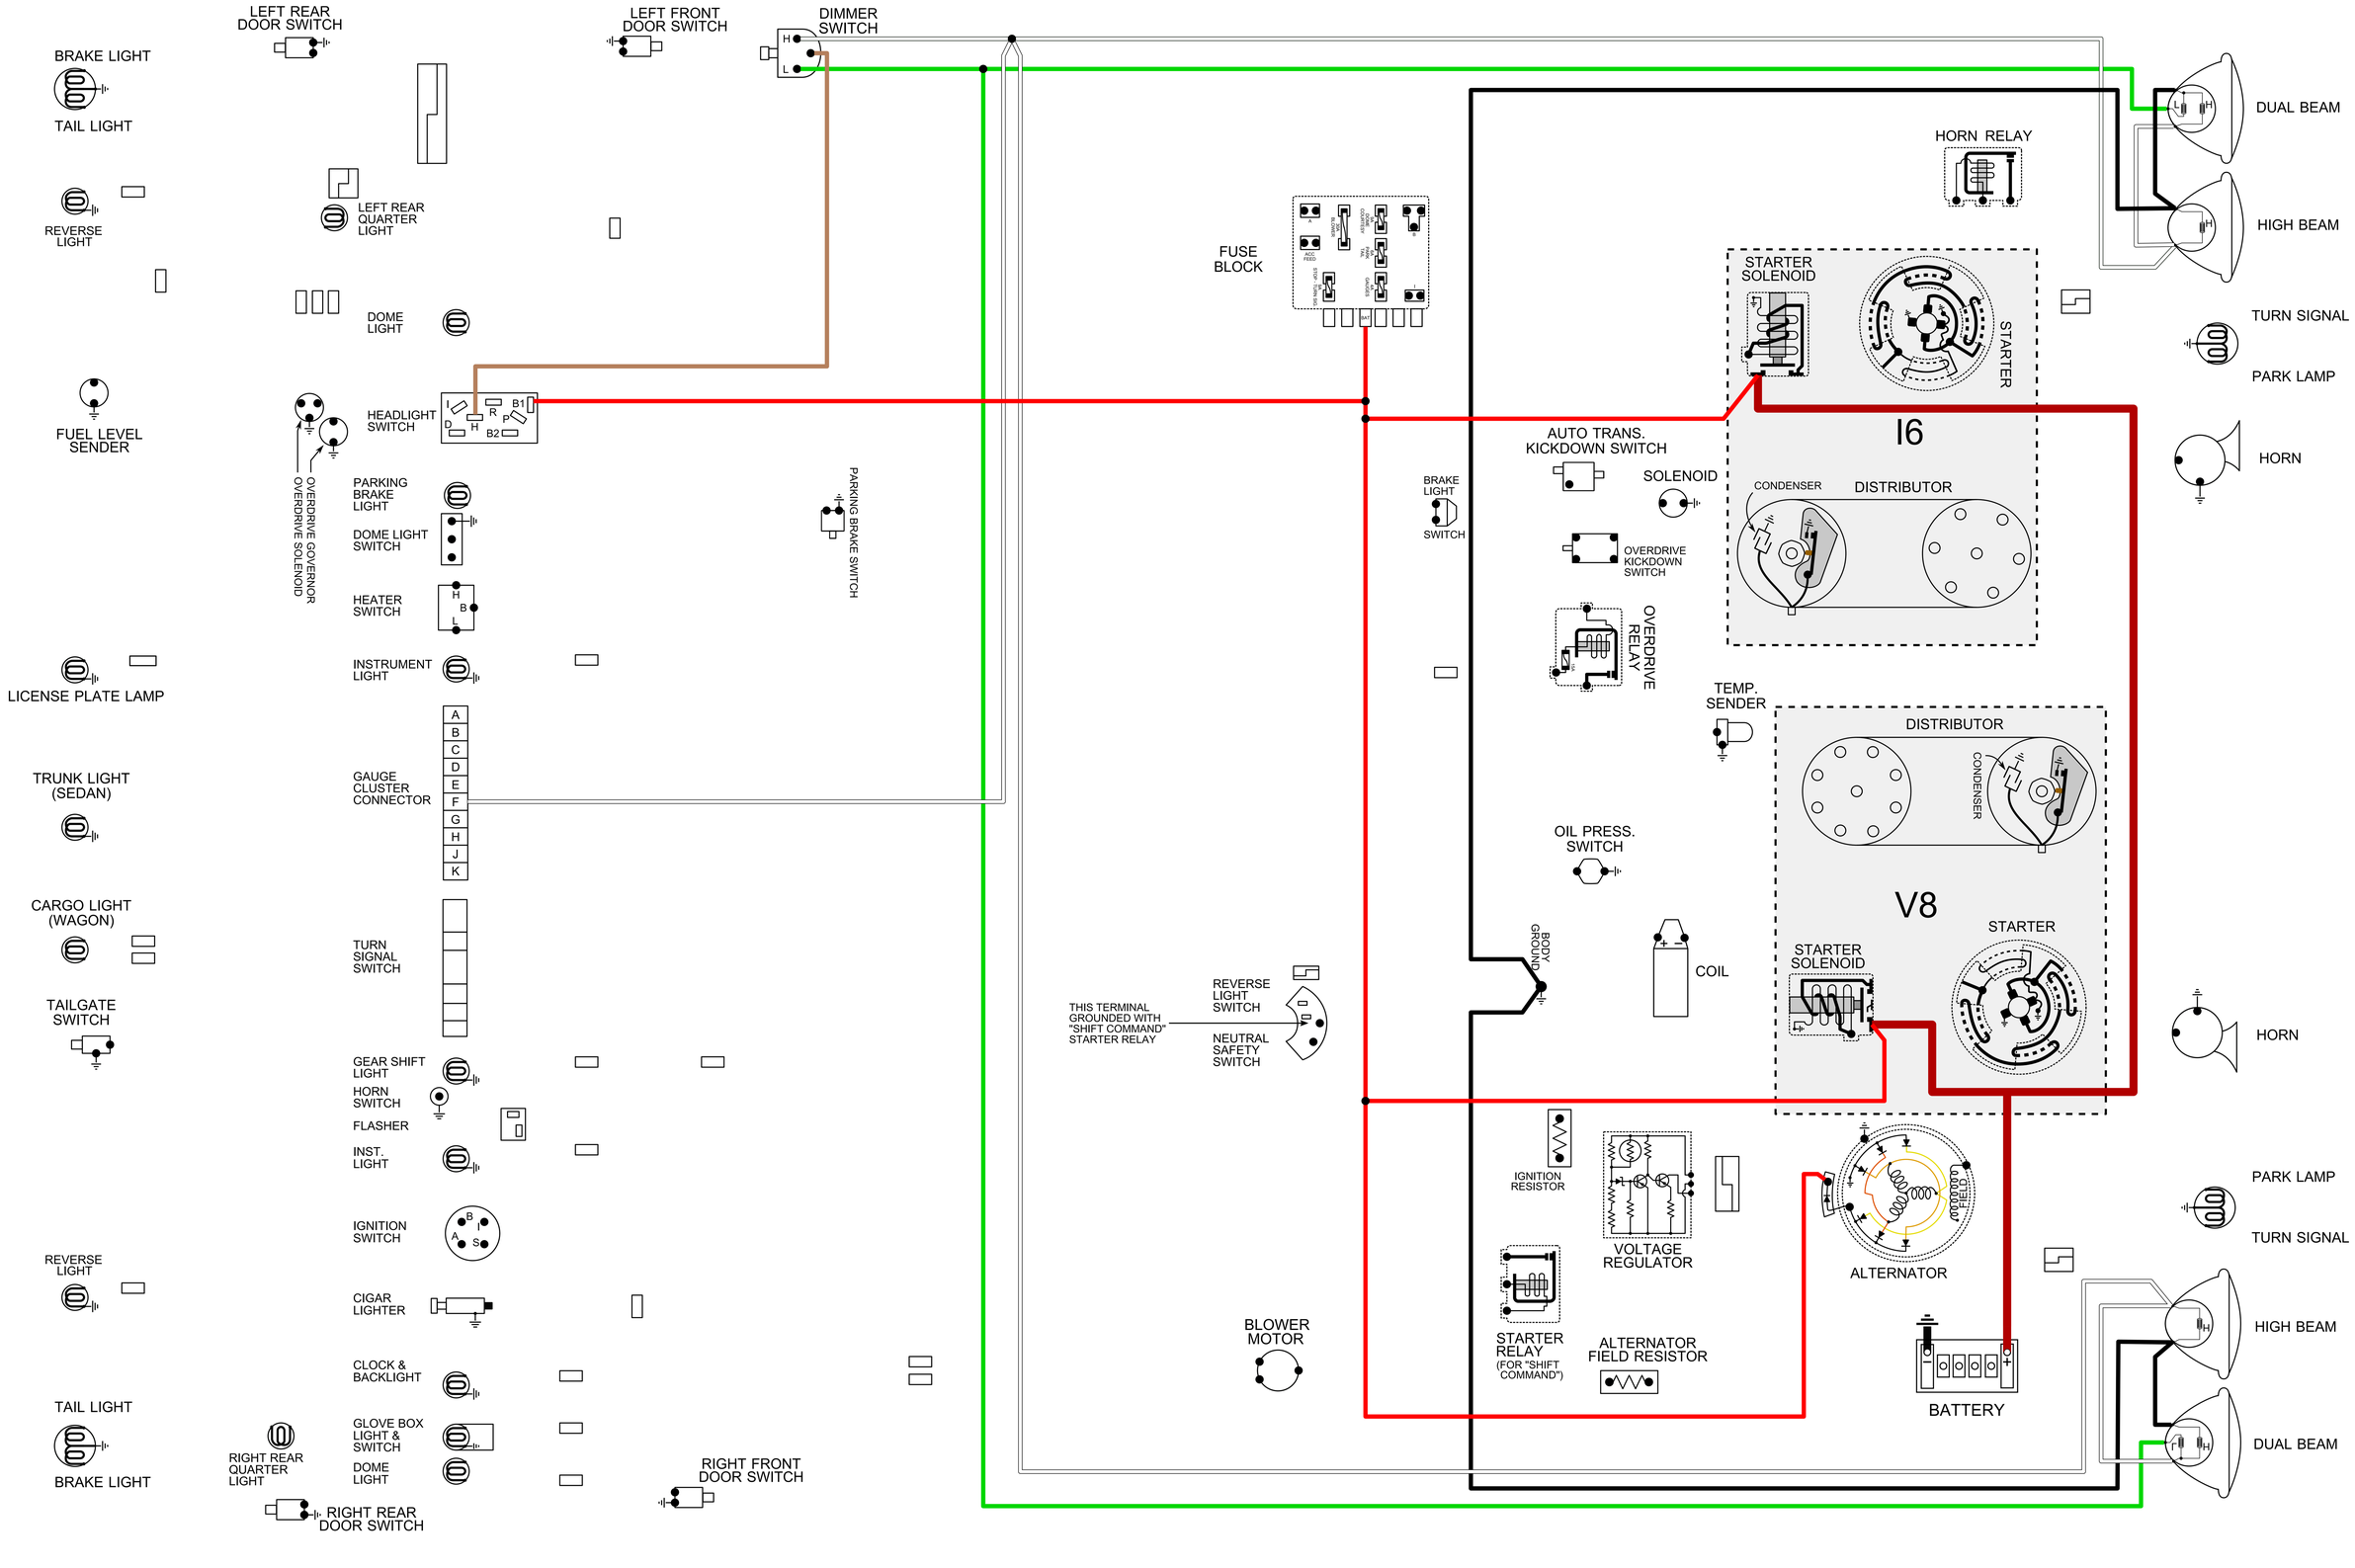

# 1964 RAMBLER CLASSIC & AMBASSADOR


## RUNNING LIGHTS

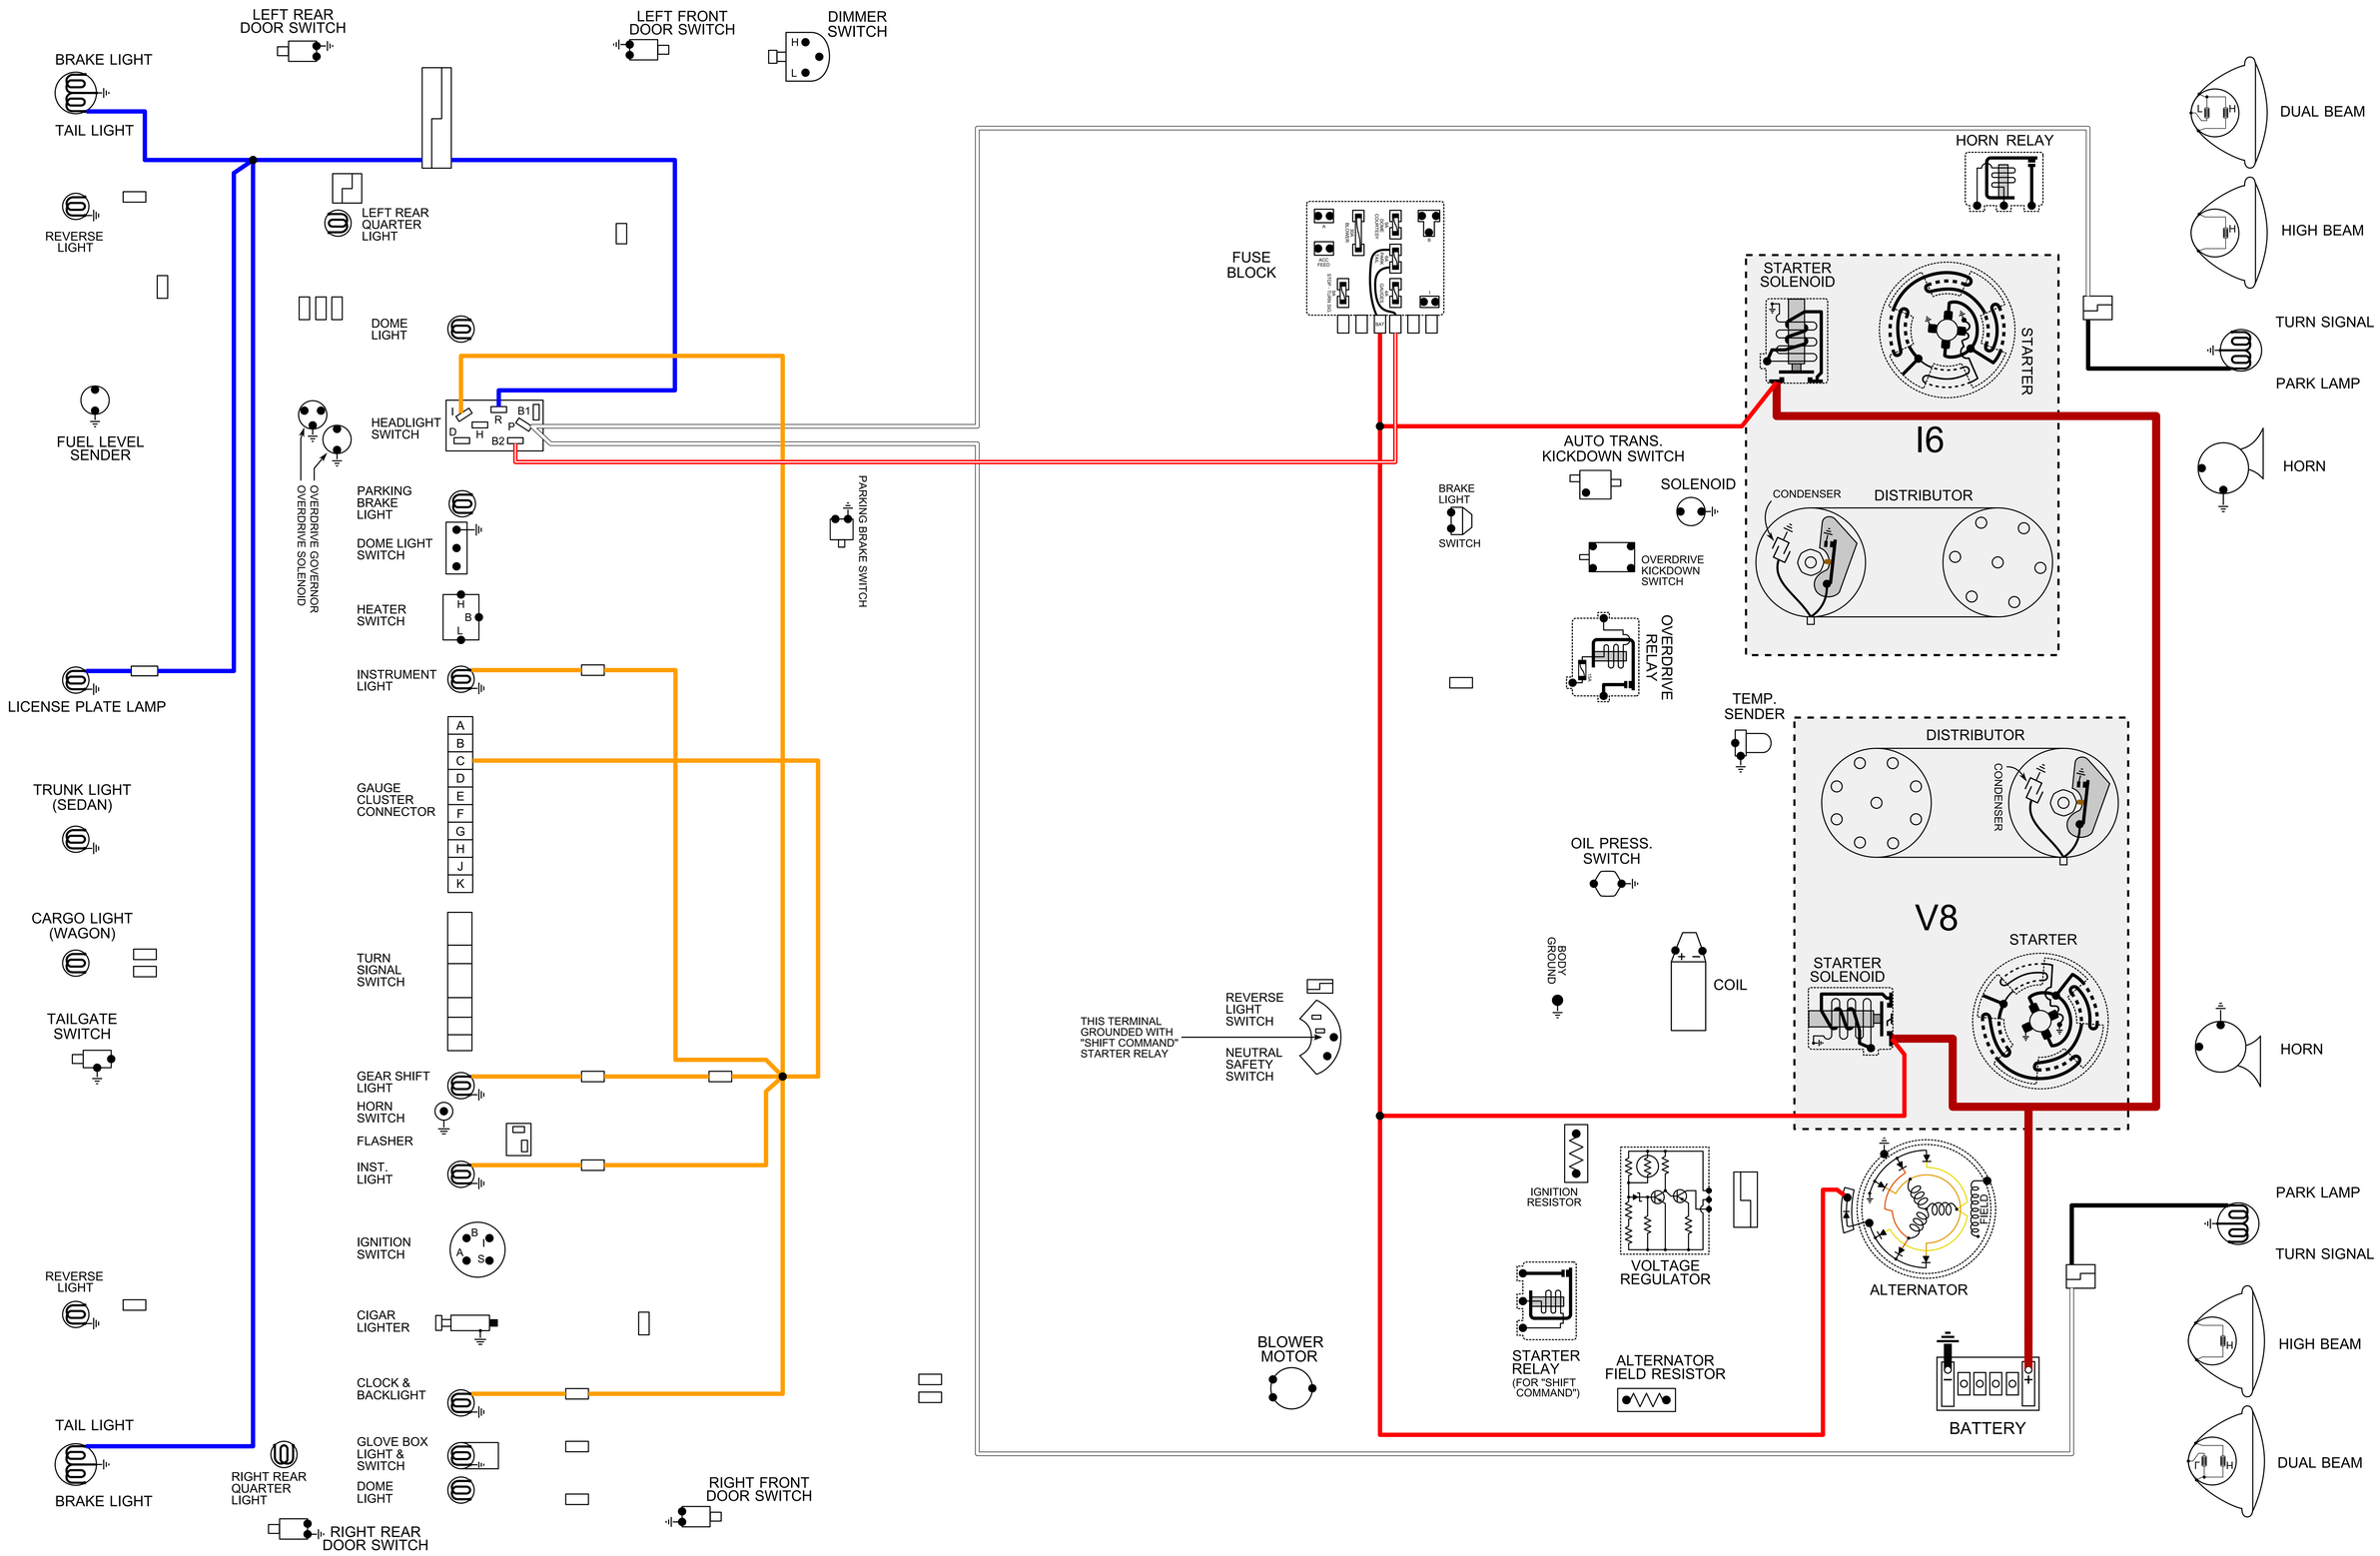


CINCO

# 1964 RAMBLER CLASSIC & AMBASSADOR


## BRAKE LIGHTS

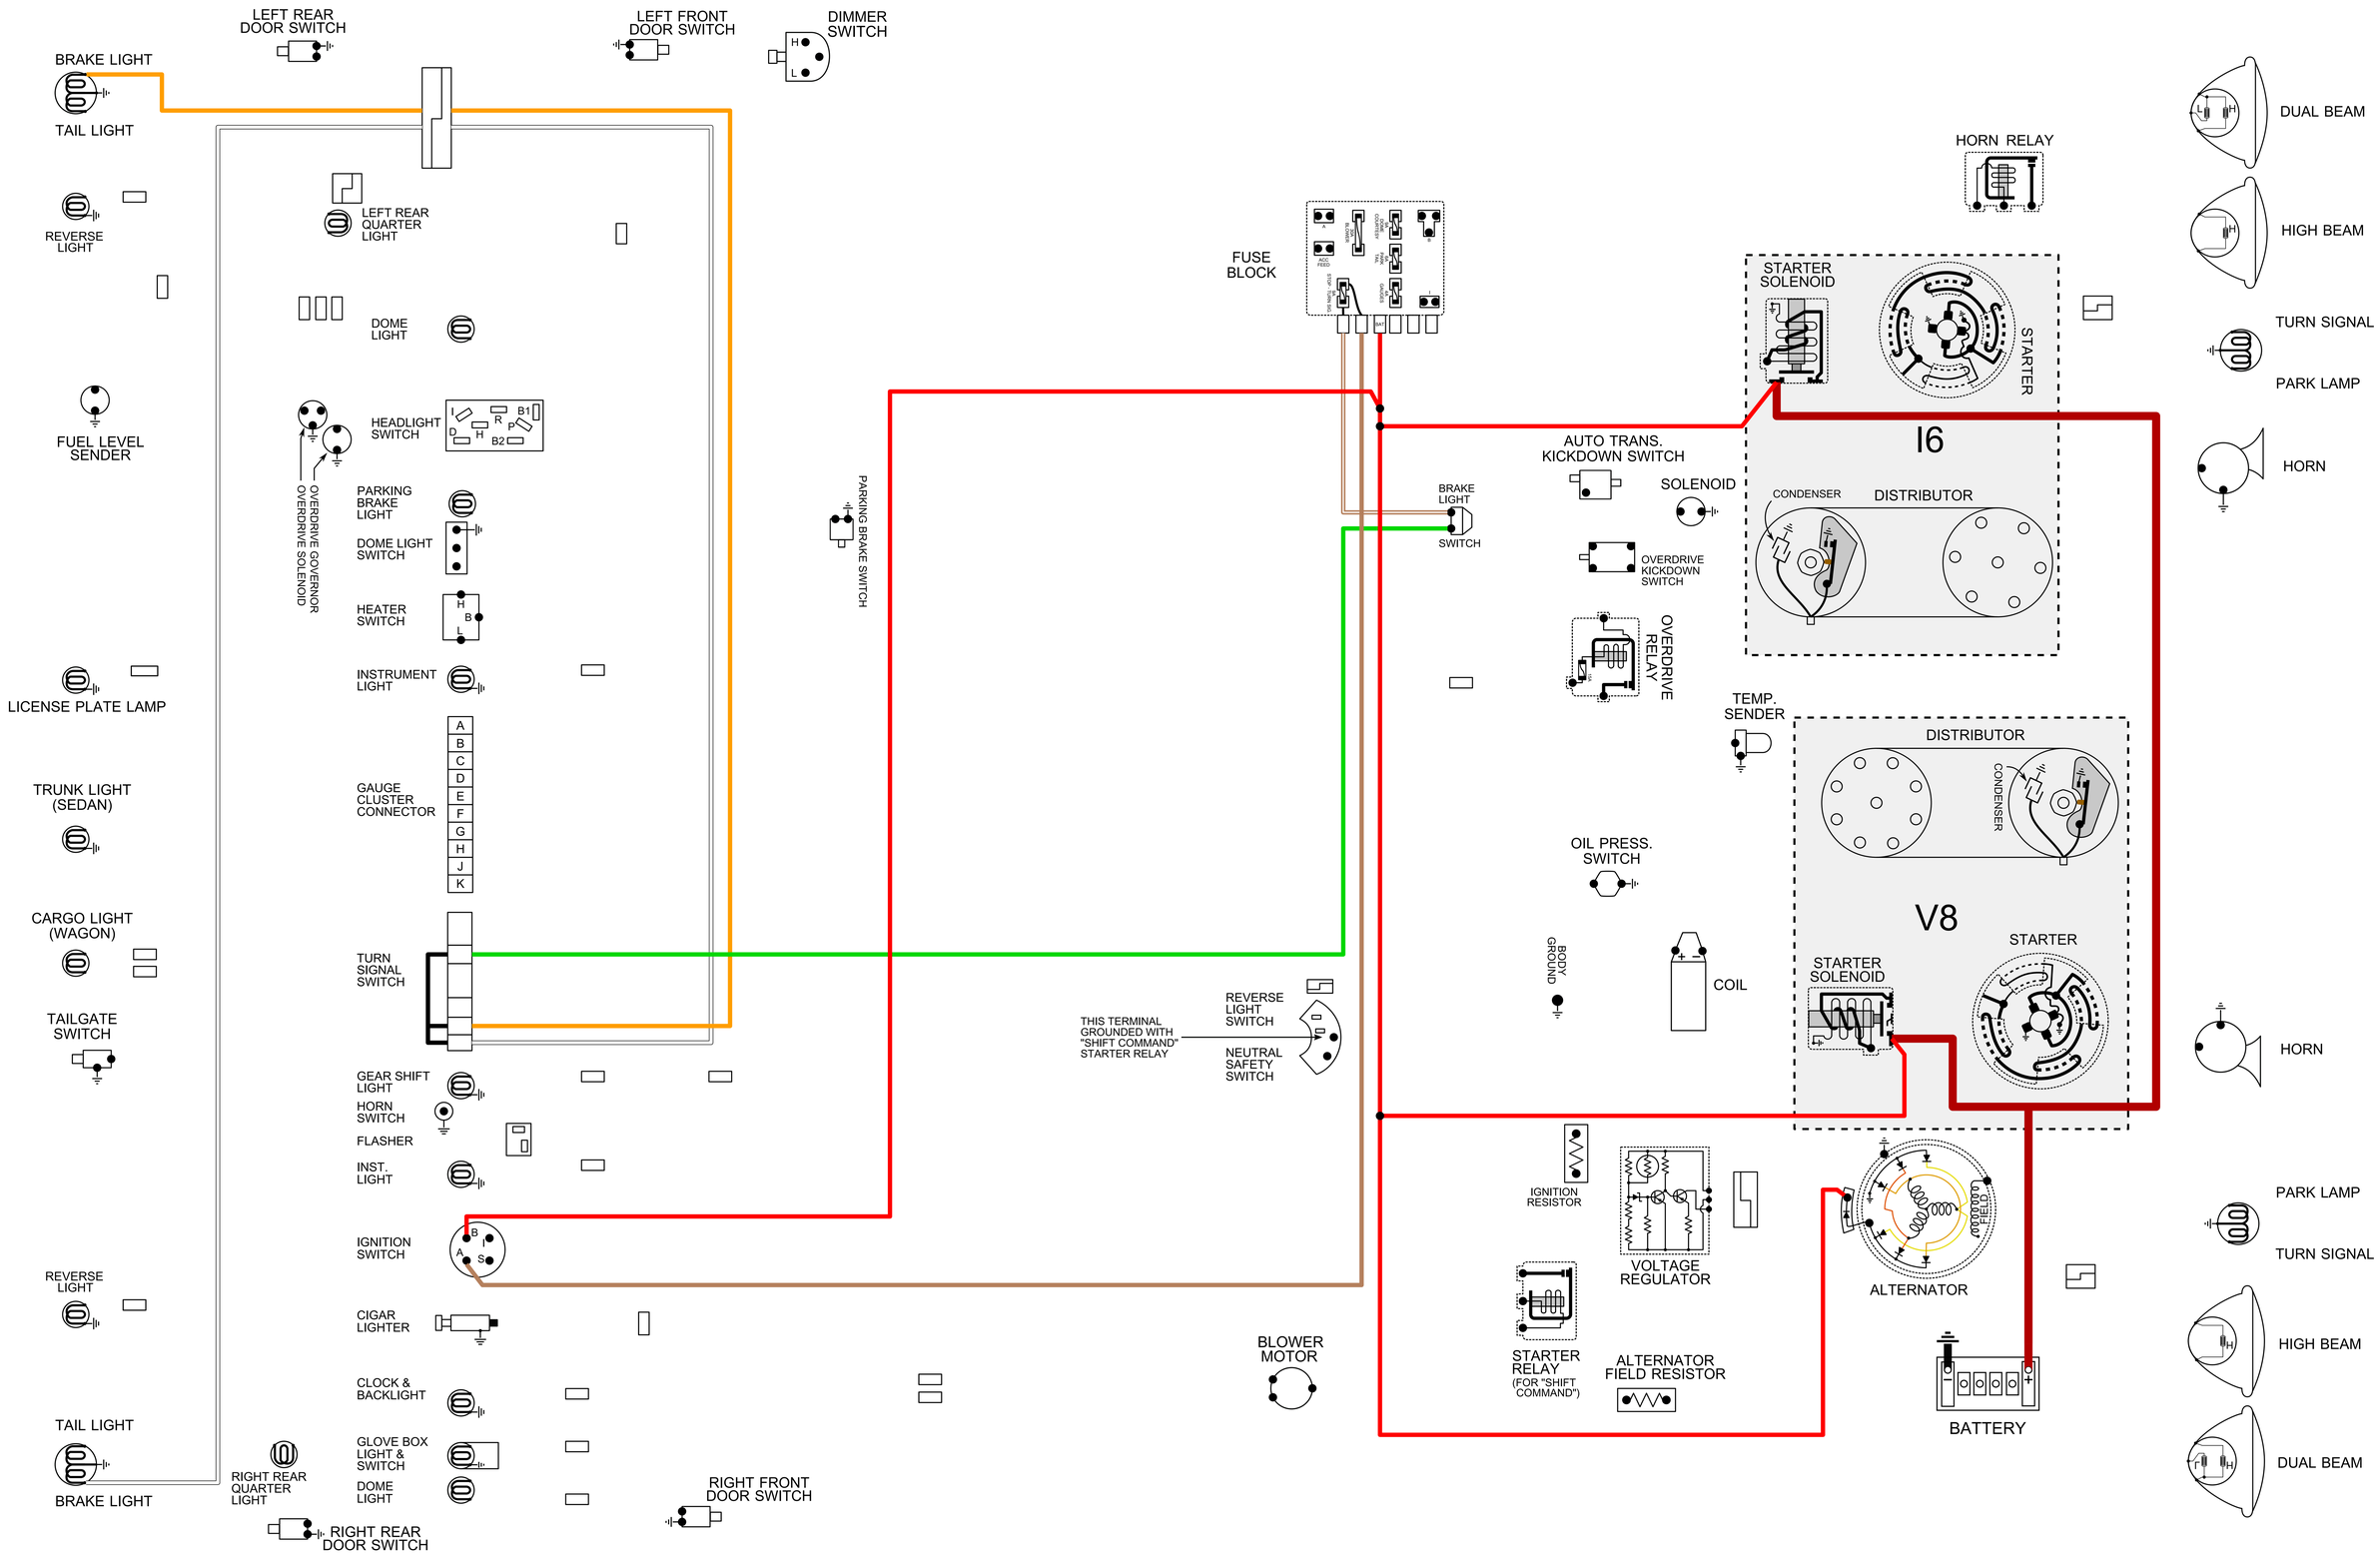


CINCO

# 1964 RAMBLER CLASSIC & AMBASSADOR


## TURN SIGNALS

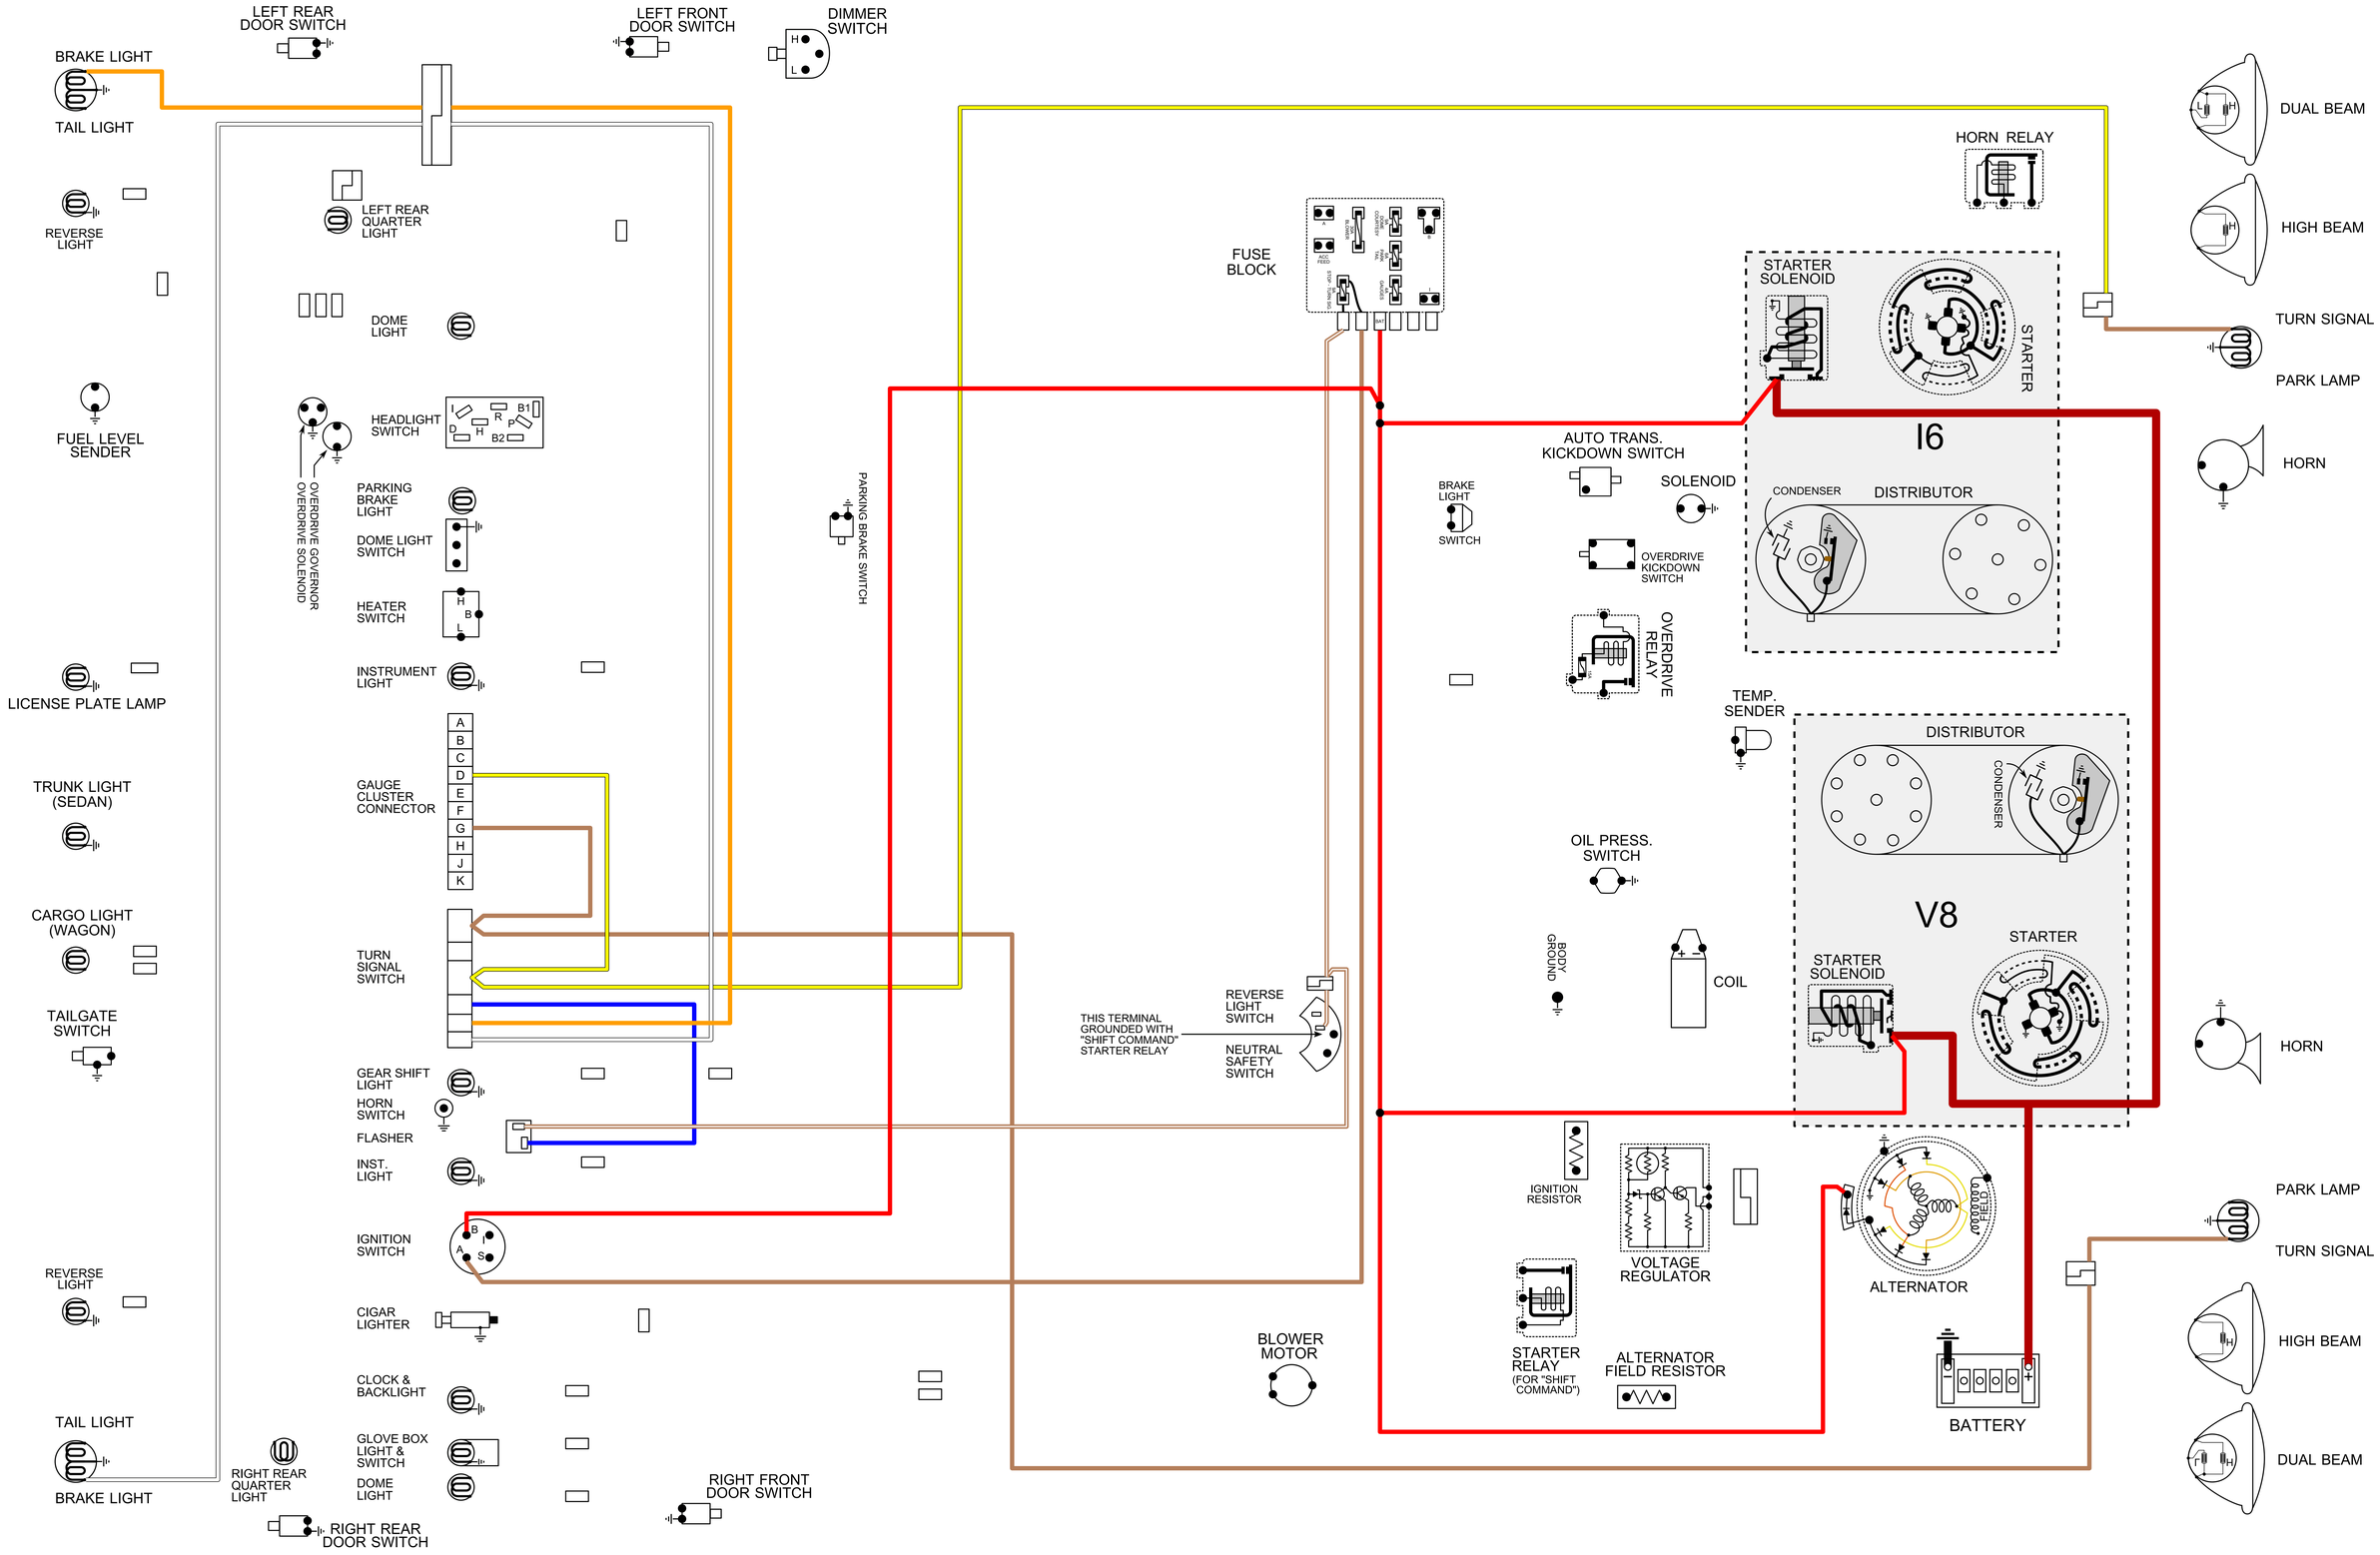


CINCO

# 1964 RAMBLER CLASSIC & AMBASSADOR


## HEATER

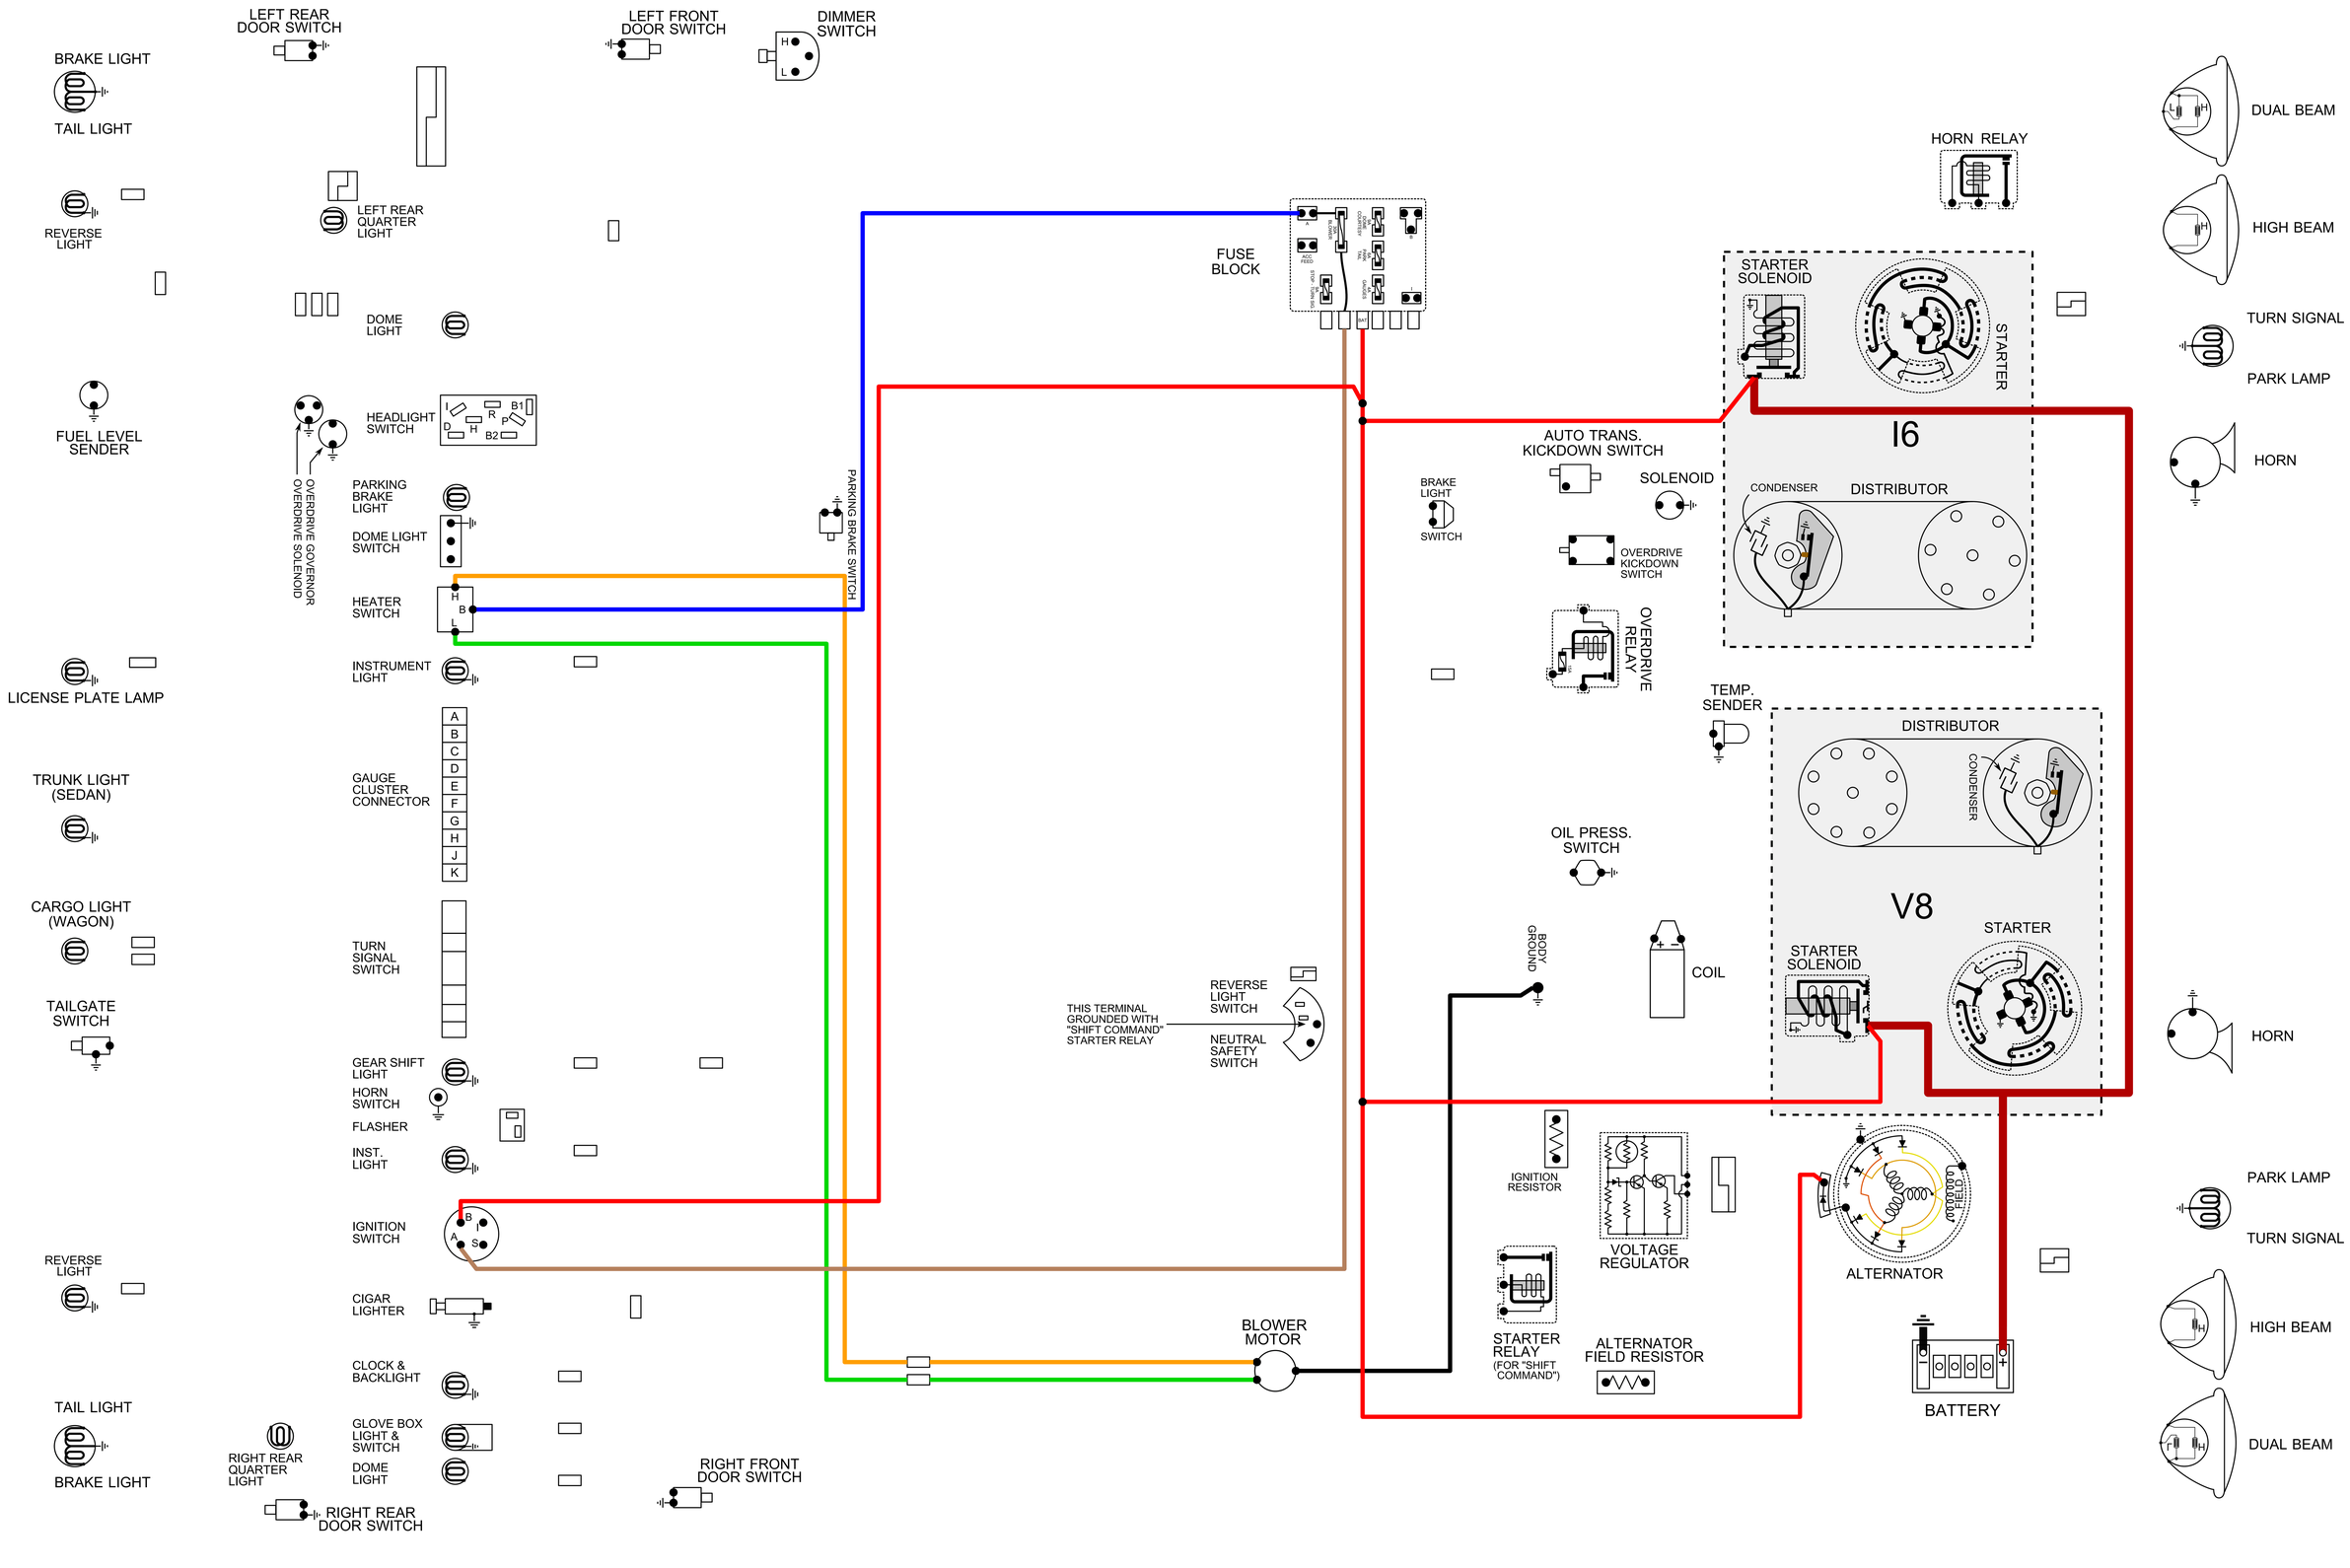


CINCO

# 1964 RAMBLER CLASSIC & AMBASSADOR

## HORN

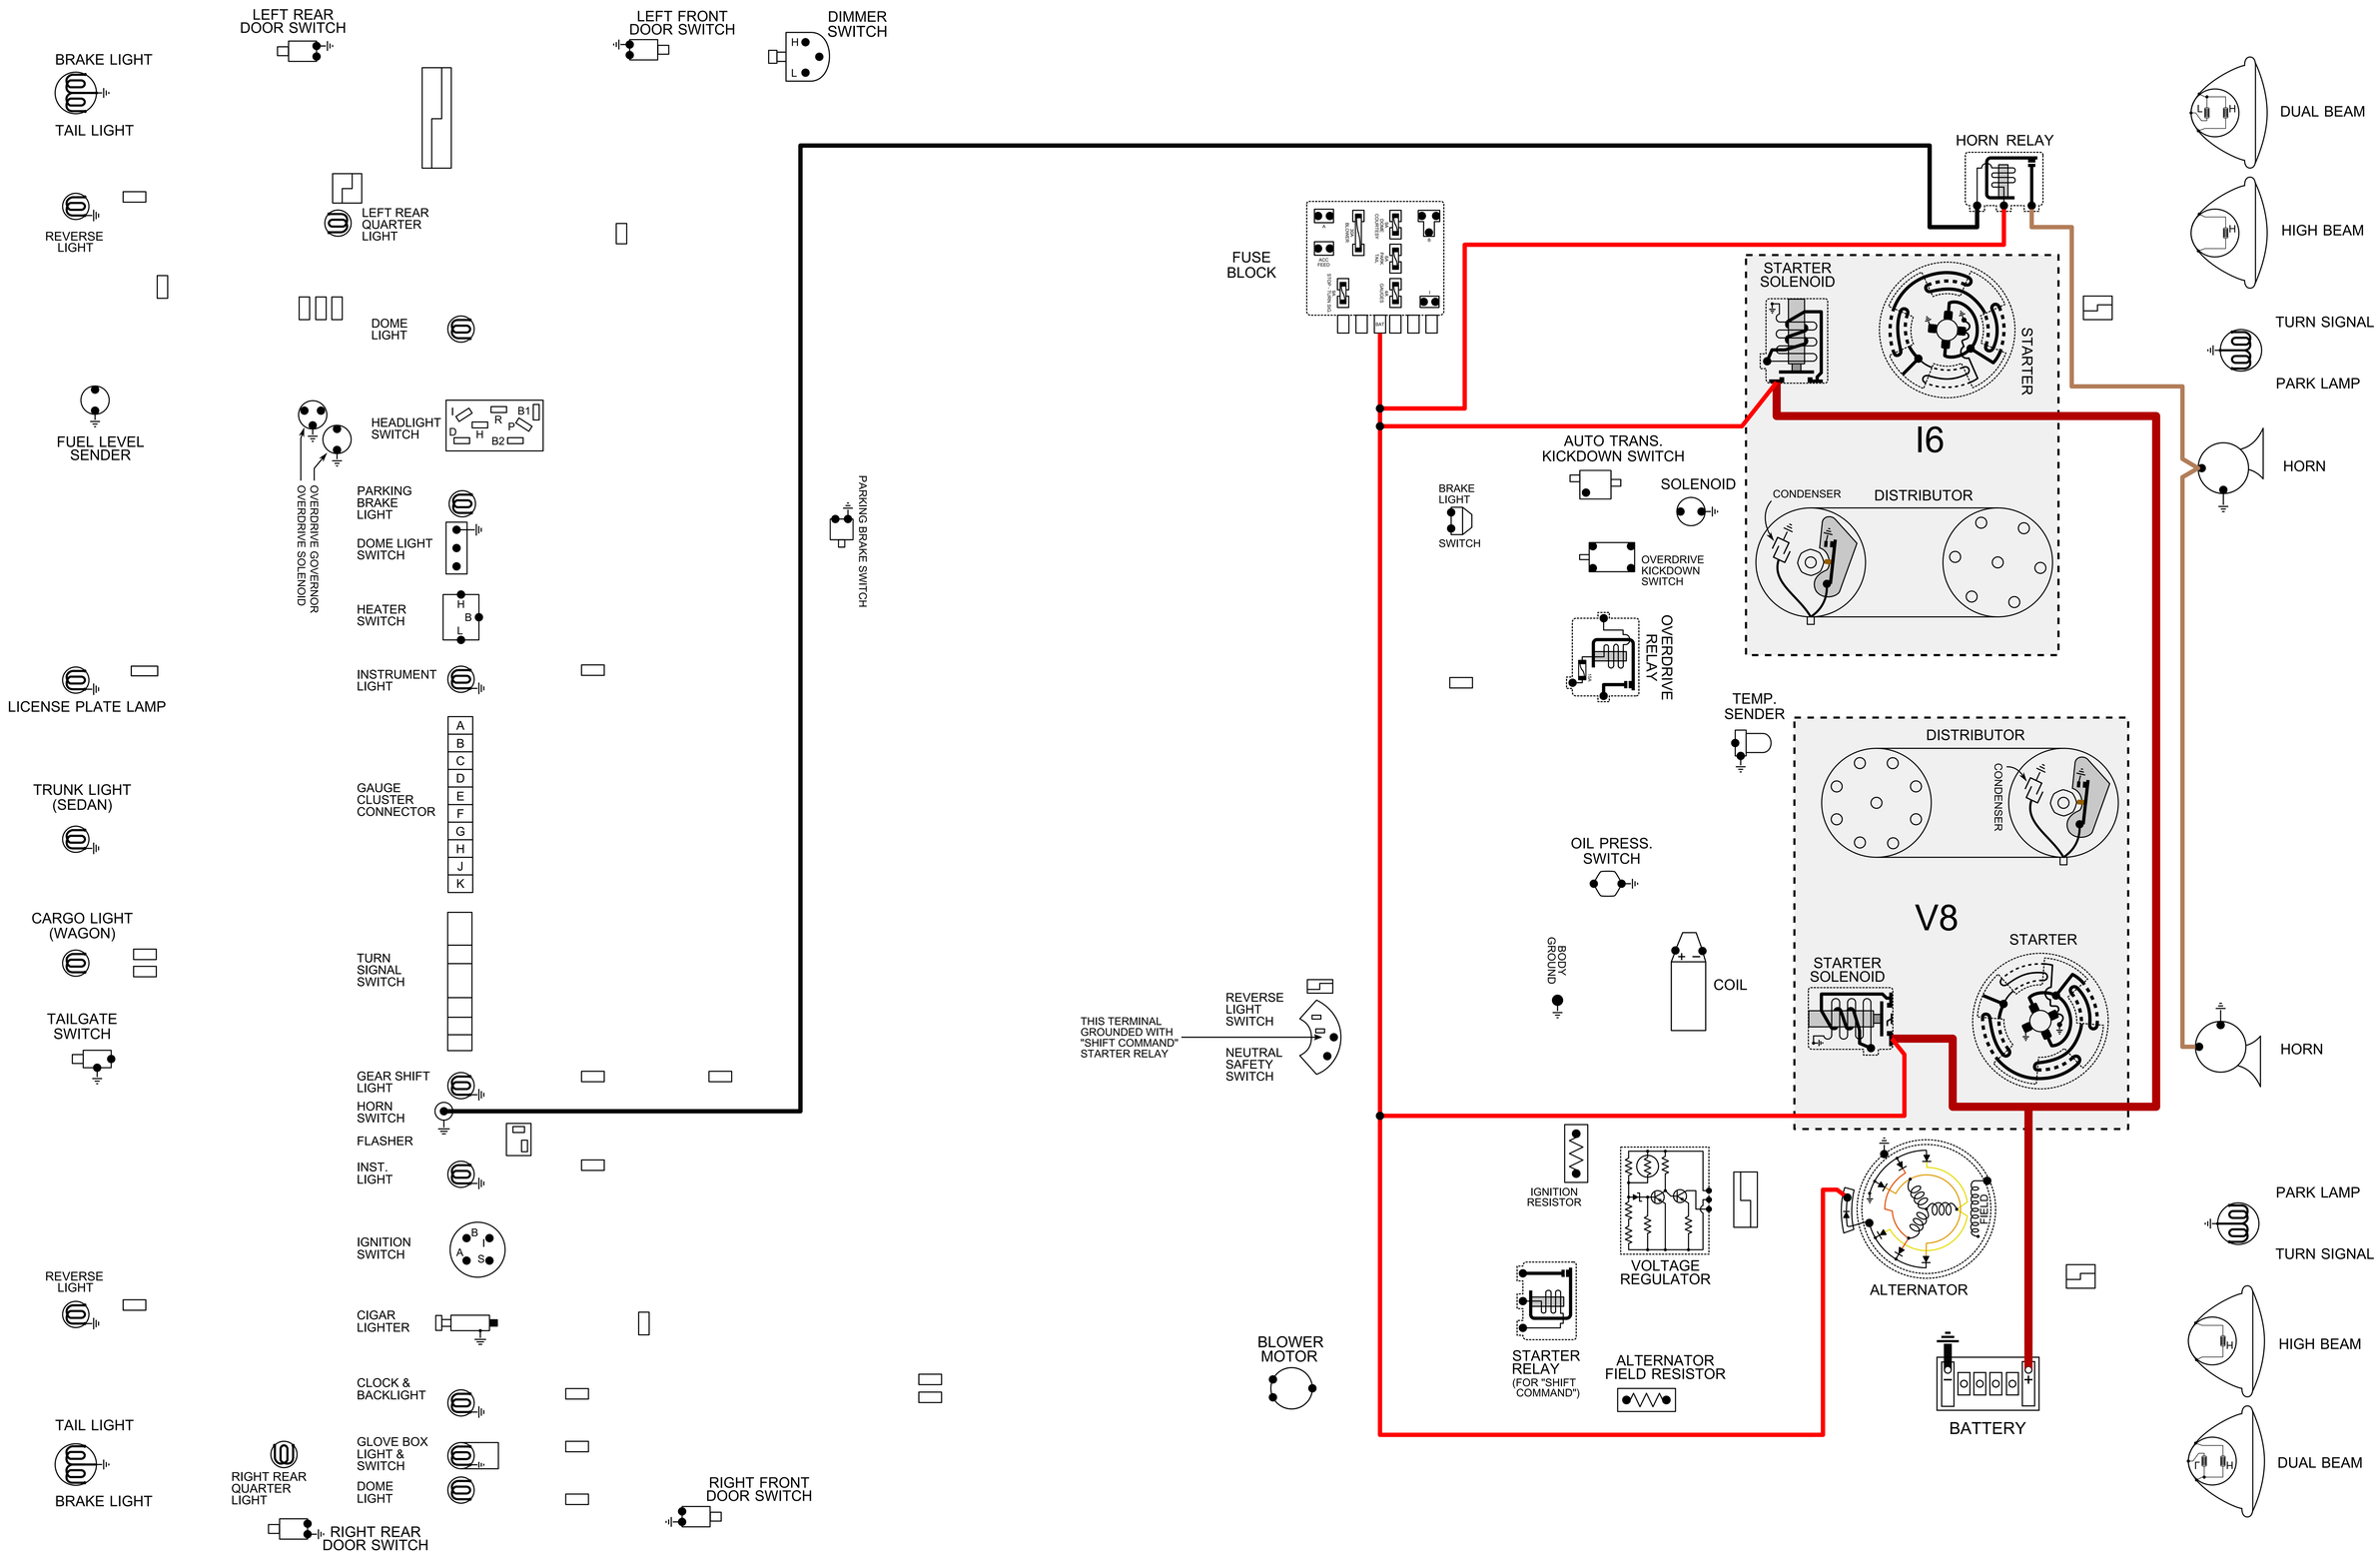


CINCO

# 1964 RAMBLER CLASSIC & AMBASSADOR


## OVERDRIVE

LEFT REAR DOOR SWITCH
LEFT FRONT DOOR SWITCH
DIMMER SWITCH
BRAKE LIGHT
TAIL LIGHT
REVERSE LIGHT
LEFT REAR QUARTER LIGHT
FUEL LEVEL SENDER
DOME LIGHT
HEADLIGHT SWITCH
OVERDRIVE GOVERNOR
OVERDRIVE SOLENOID
PARKING BRAKE LIGHT
DOME LIGHT SWITCH
HEATER SWITCH
PARKING BRAKE SWITCH
LICENSE PLATE LAMP
INSTRUMENT LIGHT
TRUNK LIGHT (SEDAN)
GAUGE CLUSTER CONNECTOR
CARGO LIGHT (WAGON)
TURN SIGNAL SWITCH
TAILGATE SWITCH
GEAR SHIFT LIGHT
HORN SWITCH
FLASHER
INST. LIGHT
IGNITION SWITCH
REVERSE LIGHT
CIGAR LIGHTER
CLOCK & BACKLIGHT
TAIL LIGHT
BRAKE LIGHT
GLOVE BOX LIGHT & SWITCH
DOME LIGHT
RIGHT REAR QUARTER LIGHT
RIGHT REAR DOOR SWITCH
RIGHT FRONT DOOR SWITCH
FUSE BLOCK
BRAKE LIGHT SWITCH
THIS TERMINAL GROUNDED WITH "SHIFT COMMAND" STARTER RELAY
REVERSE LIGHT SWITCH
NEUTRAL SAFETY SWITCH
BLOWER MOTOR
AUTO TRANS. KICKDOWN SWITCH
SOLENOID
OVERDRIVE KICKDOWN SWITCH
OVERDRIVE RELAY
TEMP. SENDER
OIL PRESS. SWITCH
BODY GROUND
COIL
IGNITION RESISTOR
VOLTAGE REGULATOR
STARTER RELAY (FOR "SHIFT COMMAND")
ALTERNATOR FIELD RESISTOR
HORN RELAY
STARTER SOLENOID
STARTER
I6
CONDENSER
DISTRIBUTOR
V8
ALTERNATOR
BATTERY
DUAL BEAM
HIGH BEAM
TURN SIGNAL
PARK LAMP
HORN

CINCO

# 1964 RAMBLER CLASSIC & AMBASSADOR


## GAUGES & WARNING LIGHTS

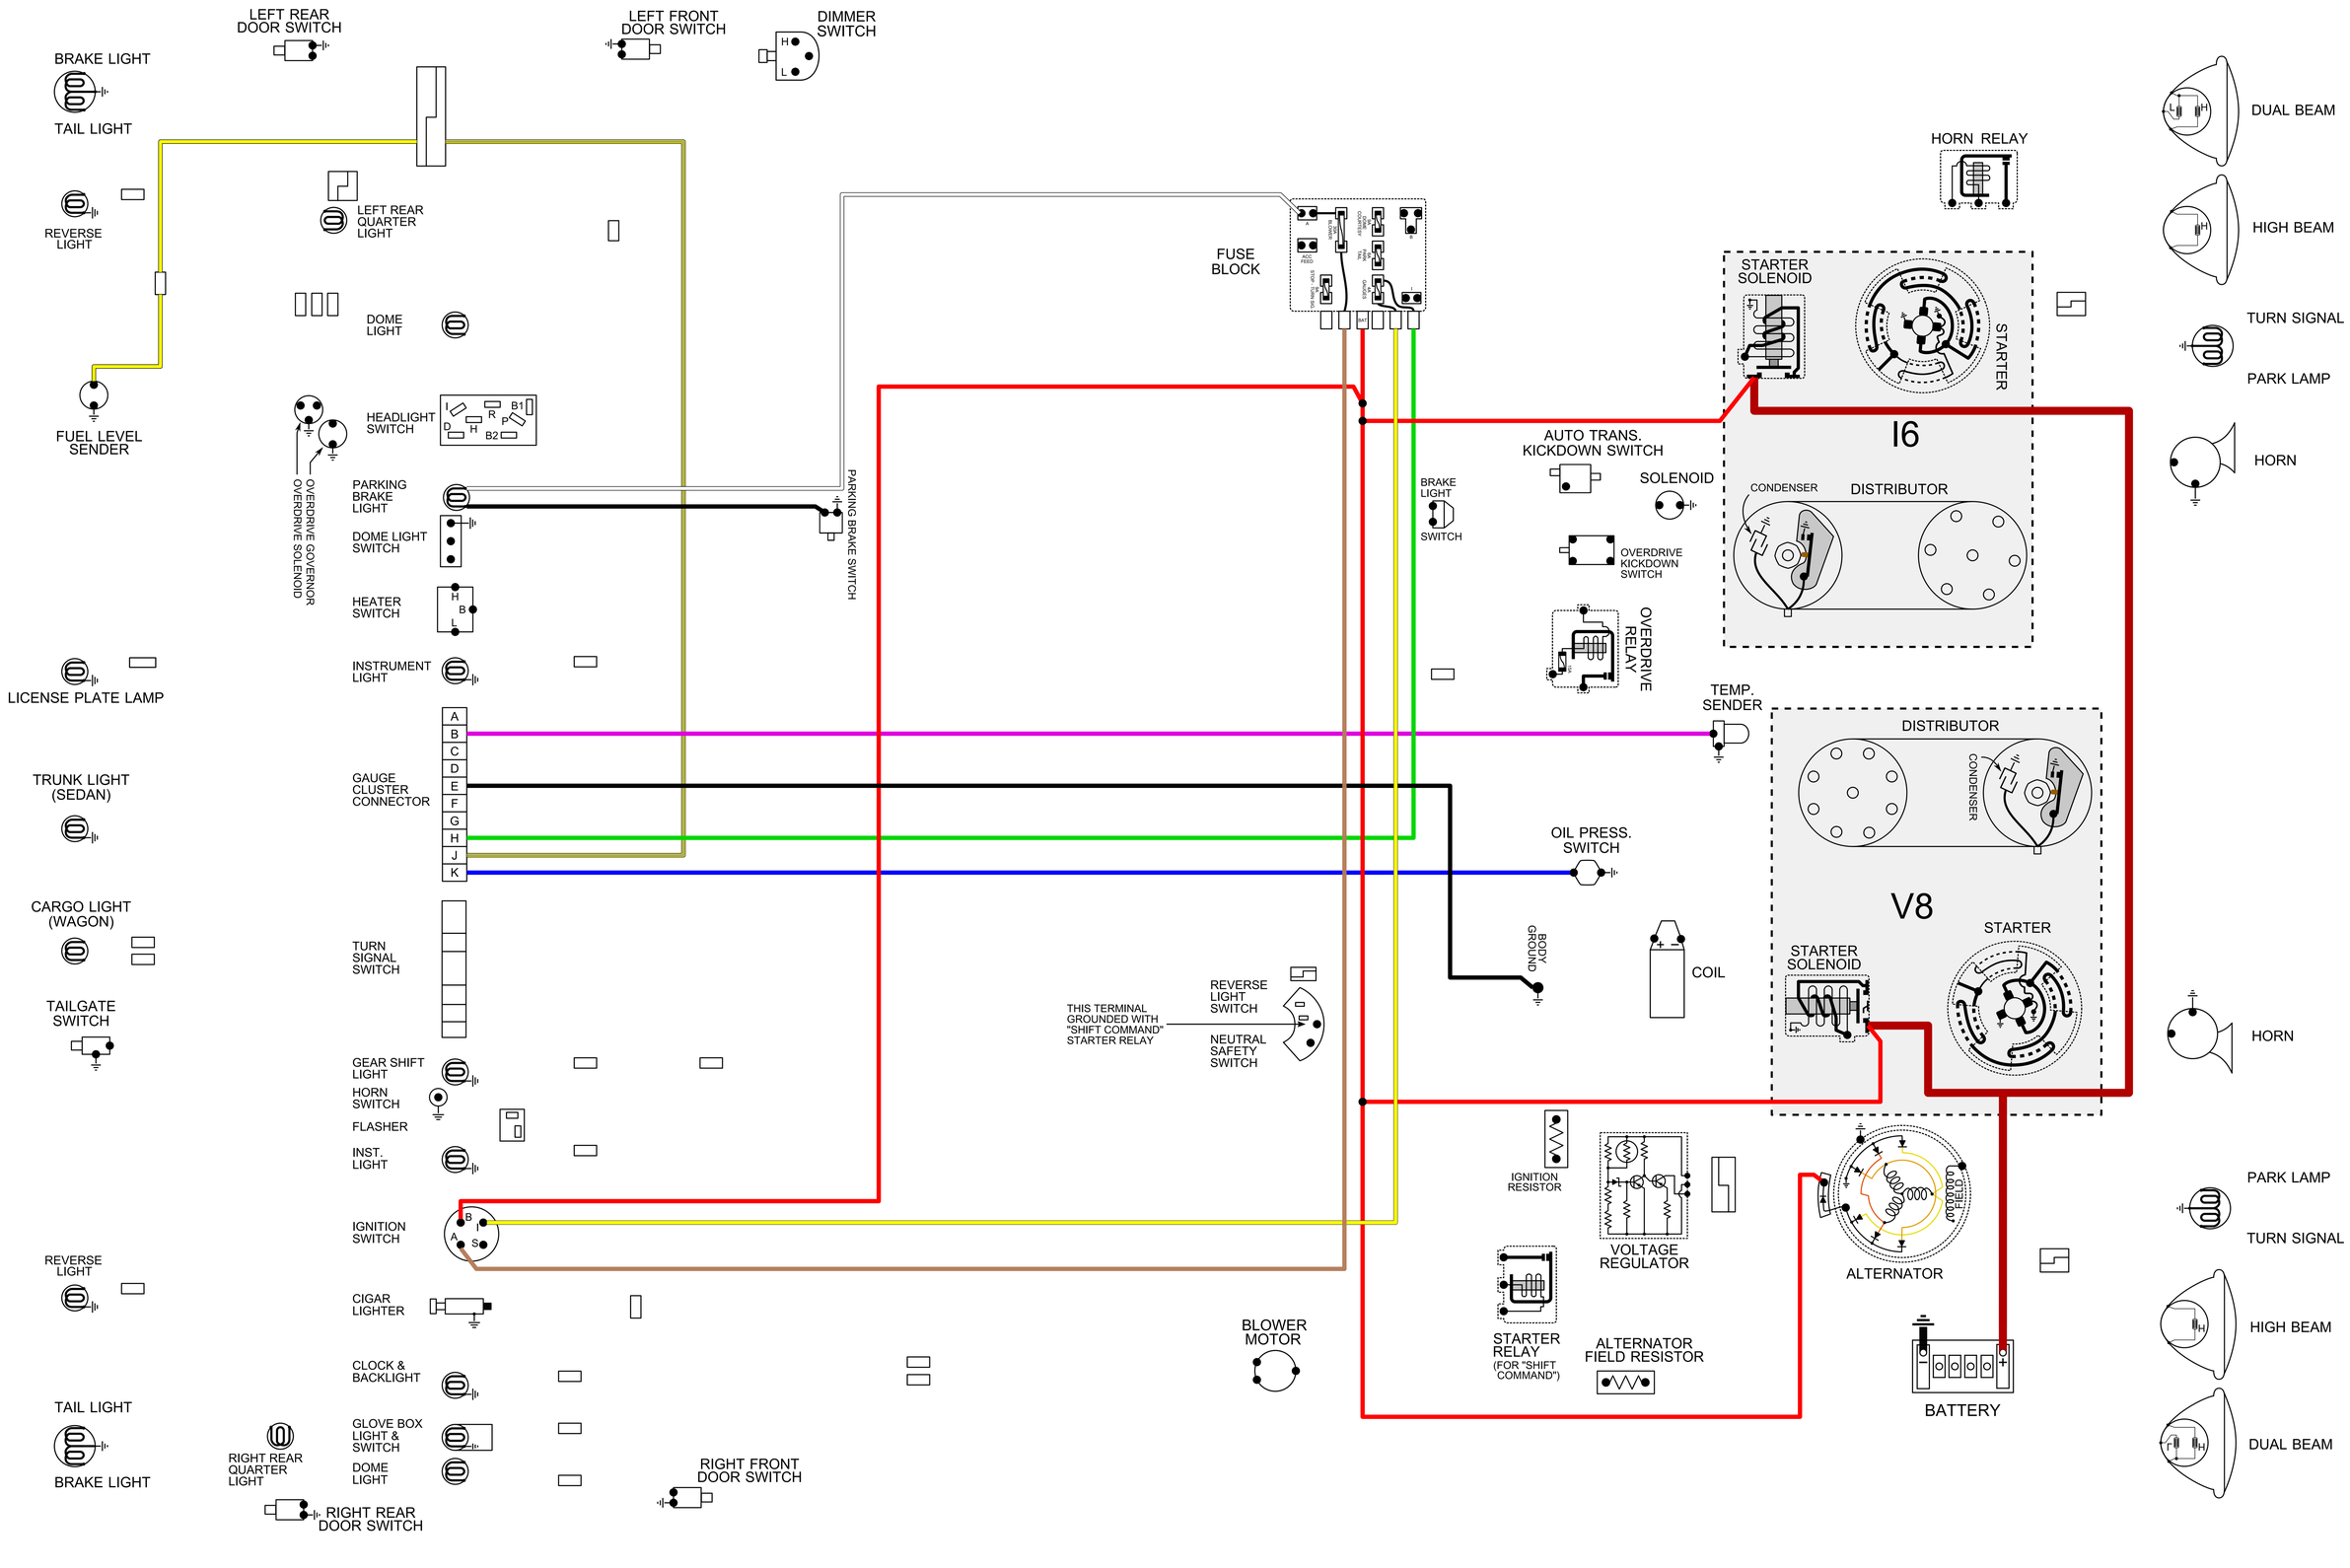


CINCO


# 1964 RAMBLER CLASSIC & AMBASSADOR

## REVERSE LIGHTS

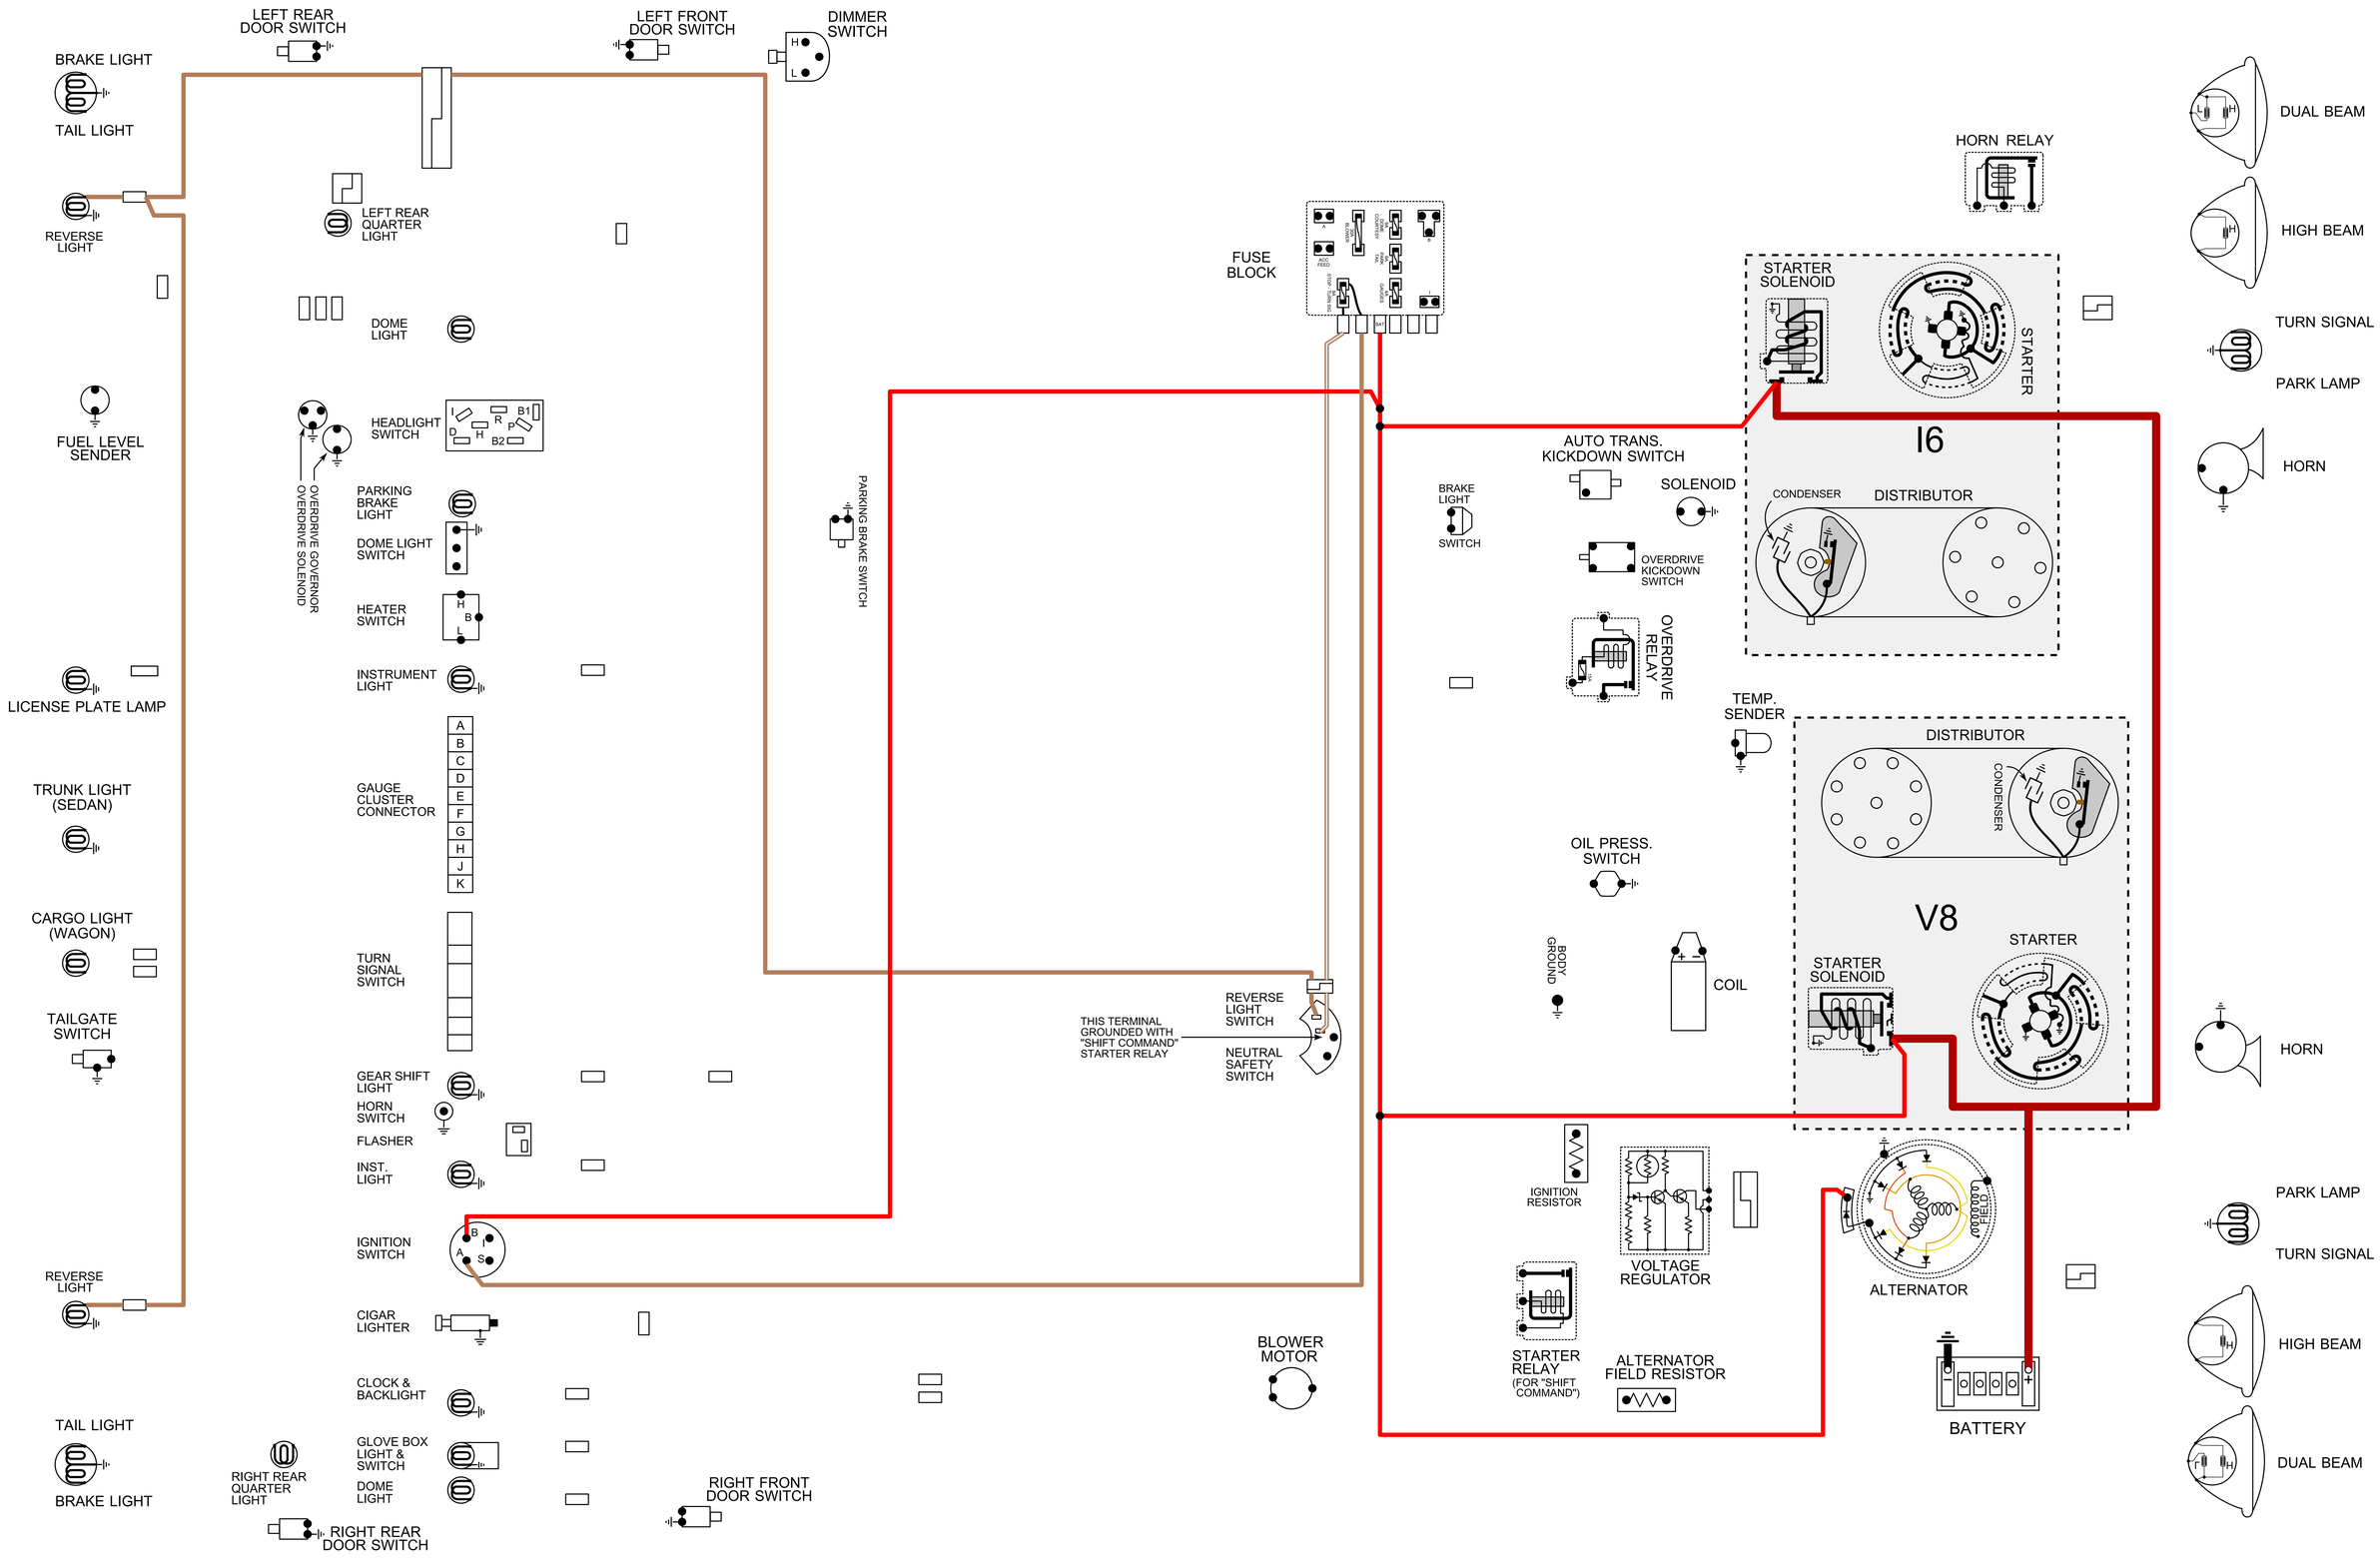


# 1964 RAMBLER CLASSIC & AMBASSADOR

## DOME LIGHTS

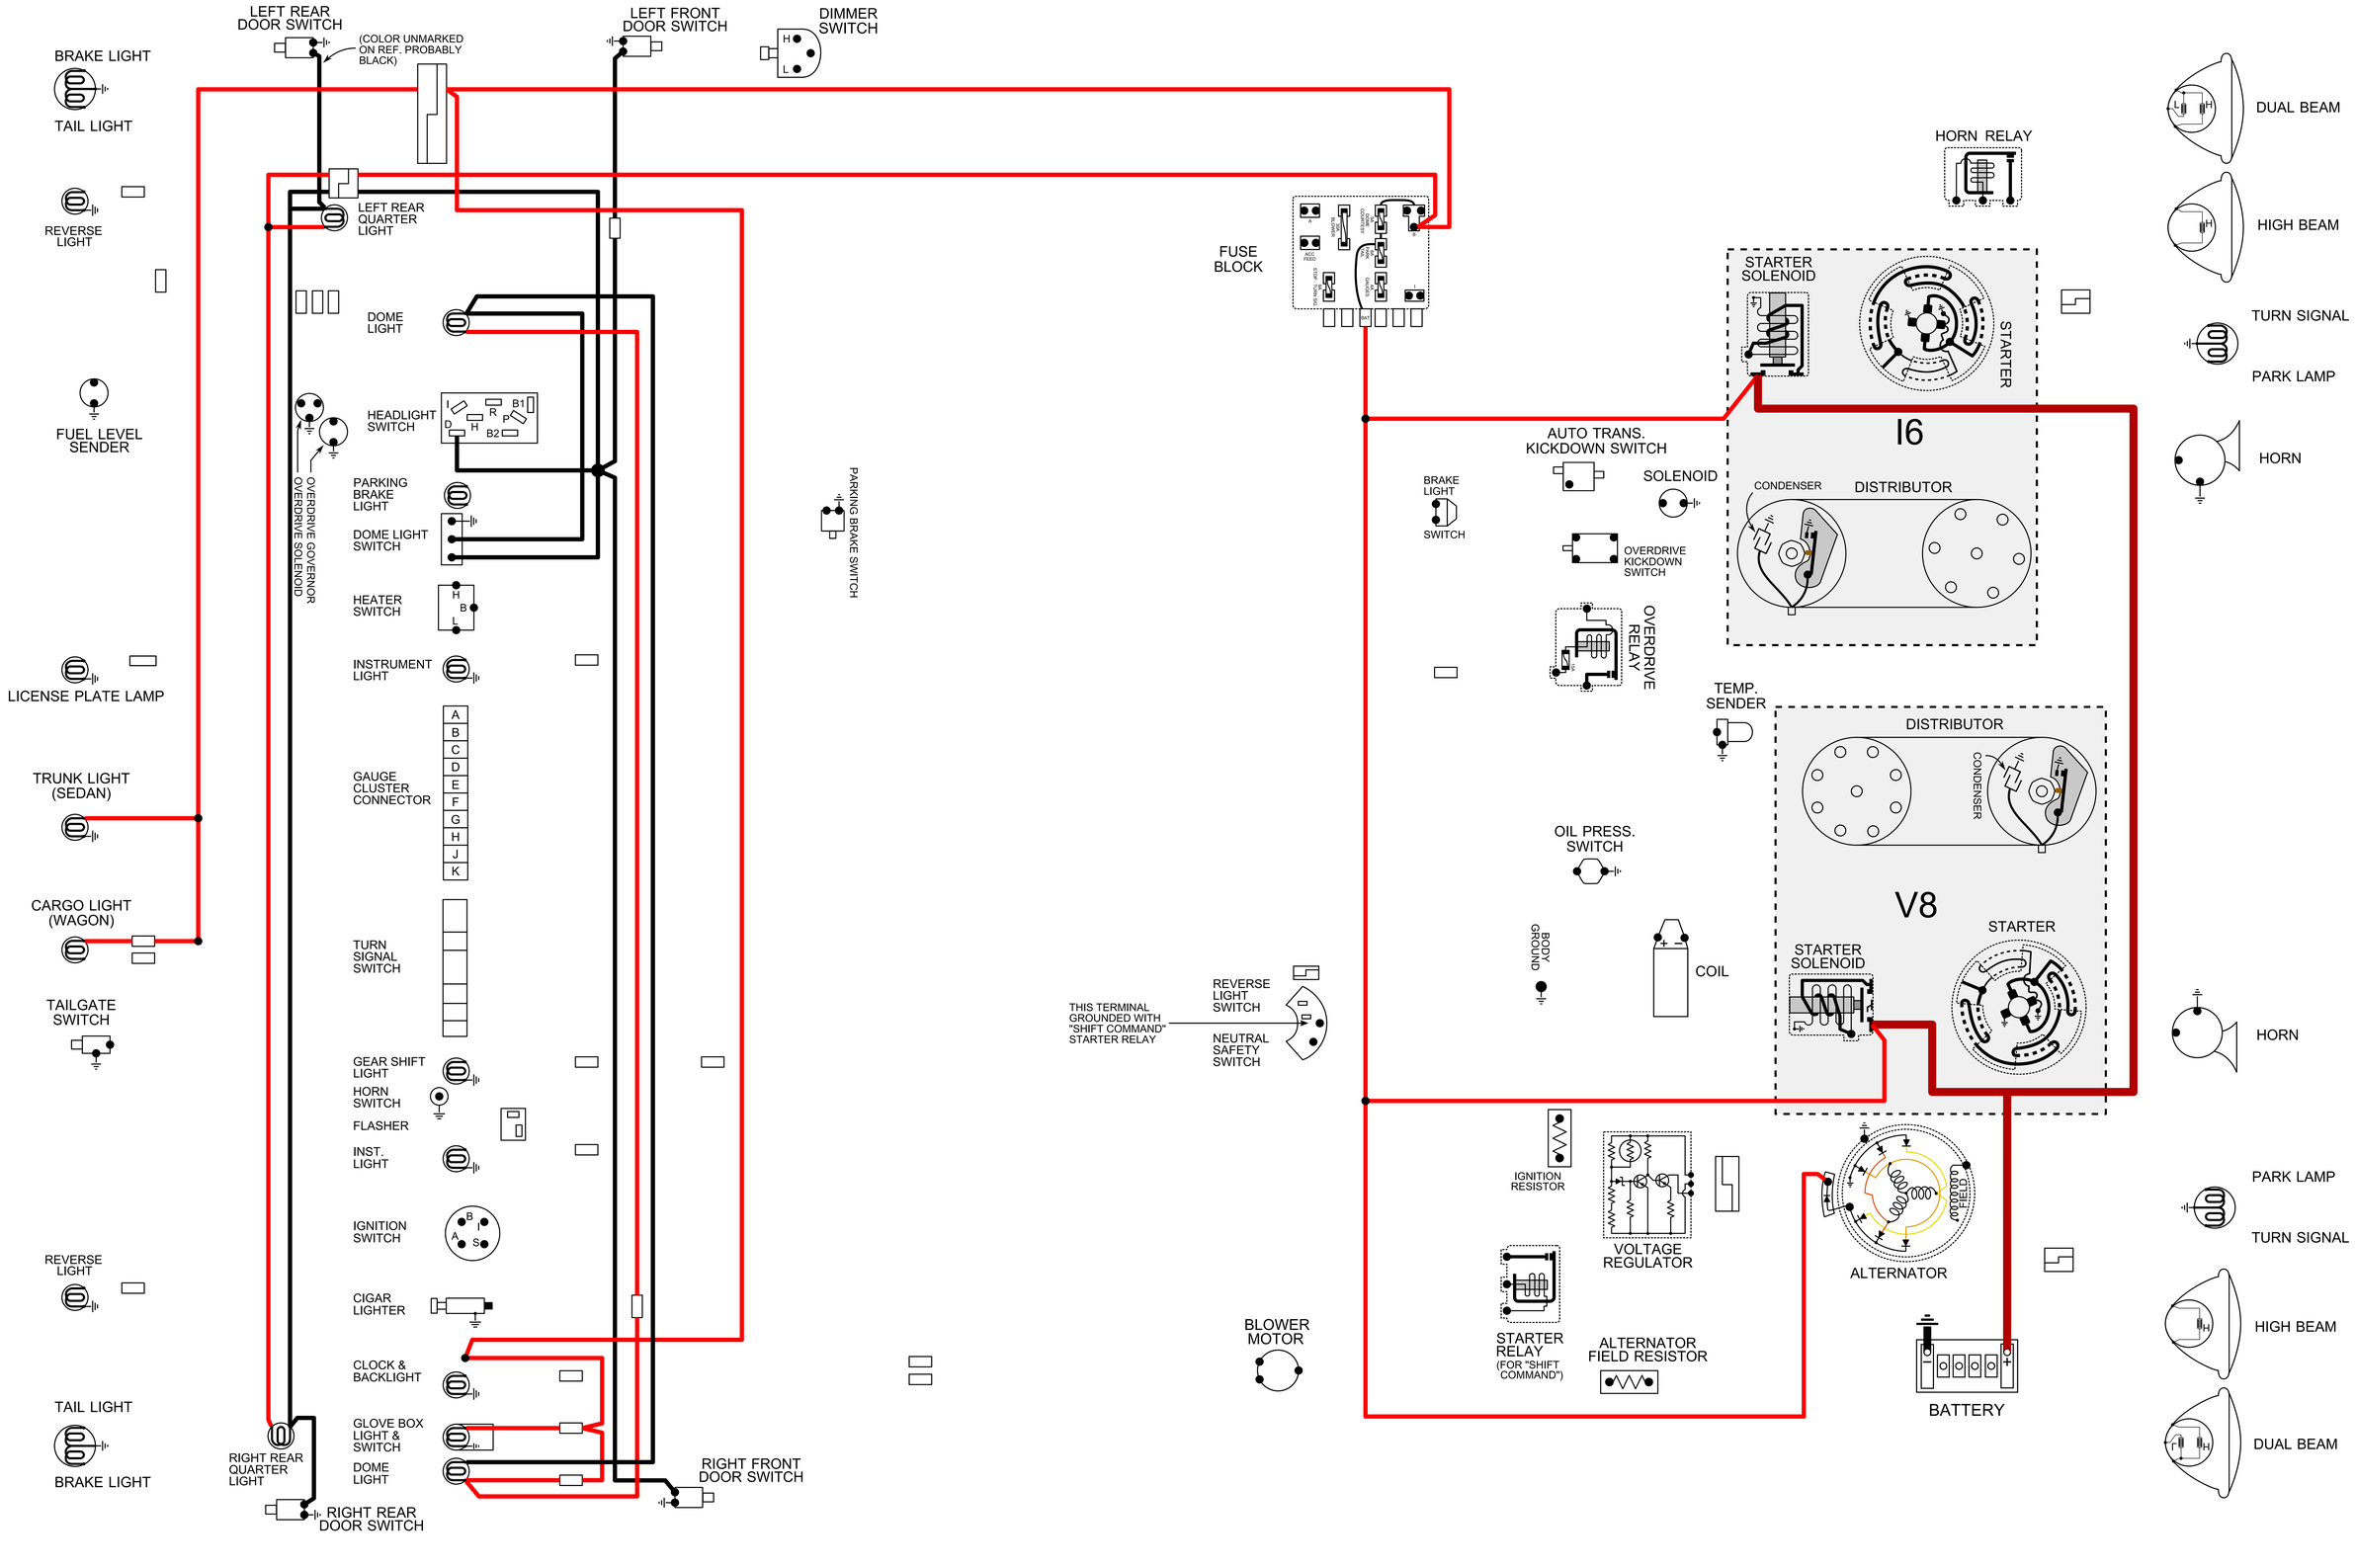


CINCO

# 1964 RAMBLER CLASSIC & AMBASSADOR

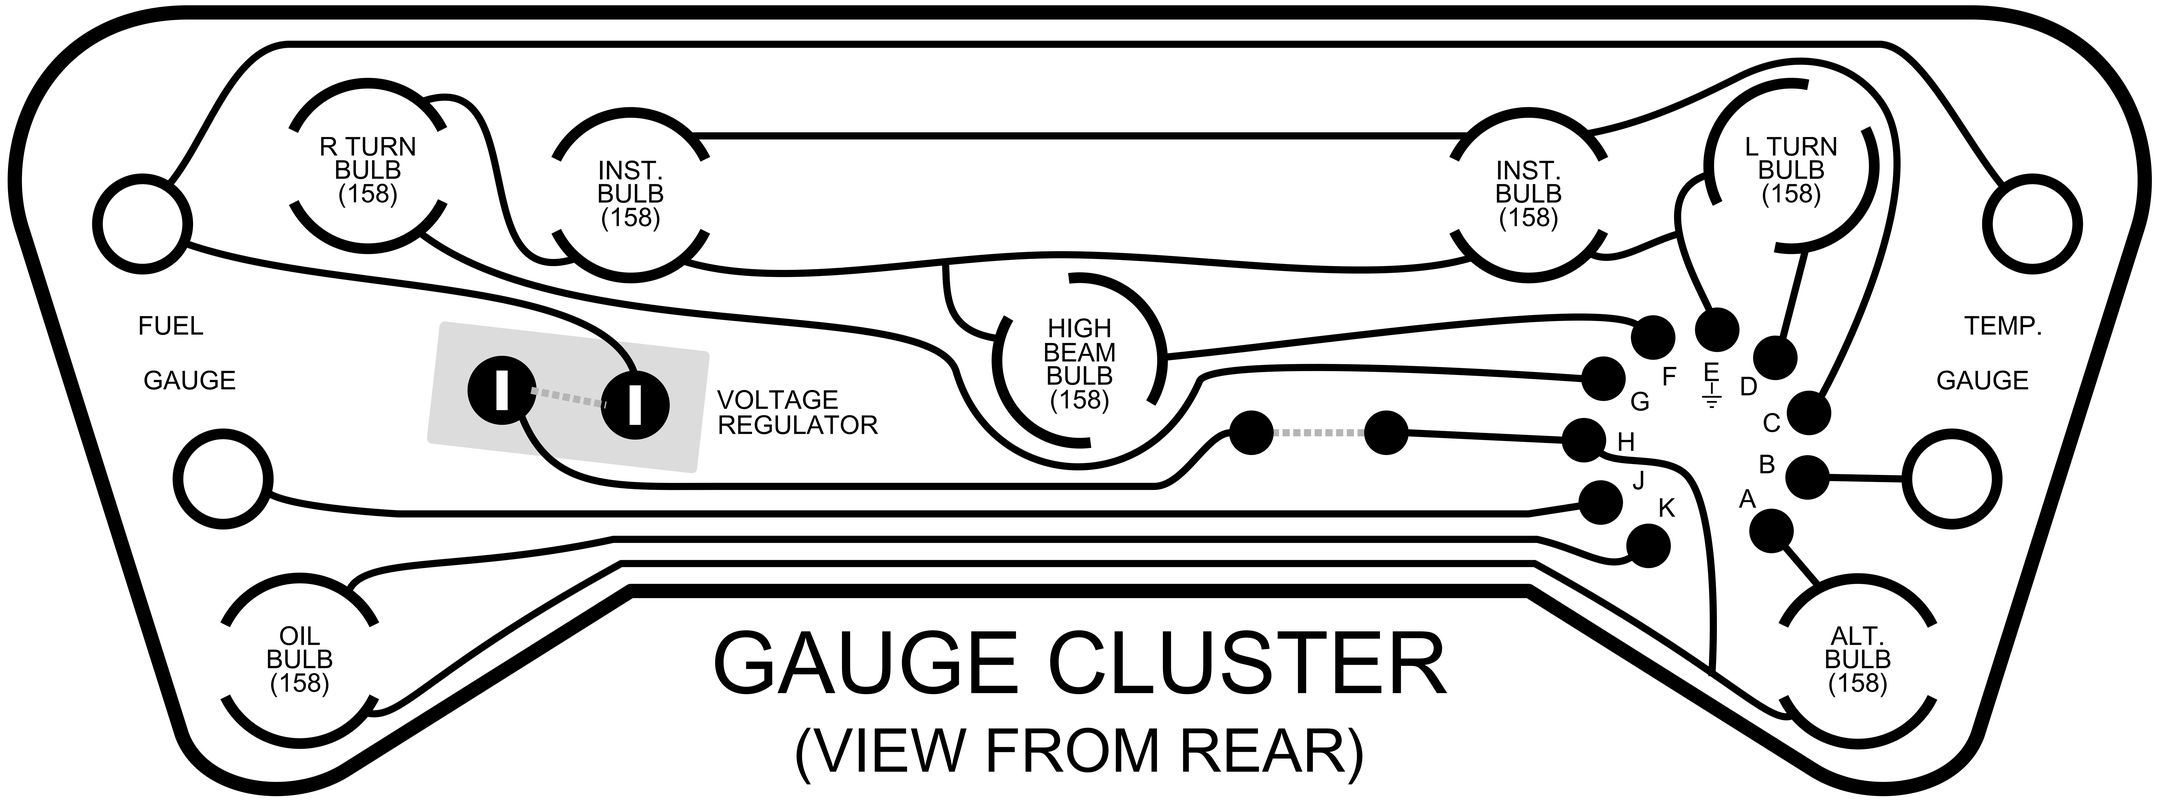


## GAUGE CLUSTER
### (VIEW FROM REAR)

| | |
|---|---|
| A | TO ALTERNATOR |
| B | TO TEMP. SENDER |
| C | TO HEADLIGHT SWITCH |
| D | TO TURN SIG. SWITCH |
| E | TO GROUND |
| F | TO DIMMER SWITCH |
| G | TO TURN SIG. SWITCH |
| H | TO FUSEBOX |
| J | TO FUEL SENDER |
| K | TO OIL PRESS. SWITCH |

CINCO